


System Description



Electrical Connections

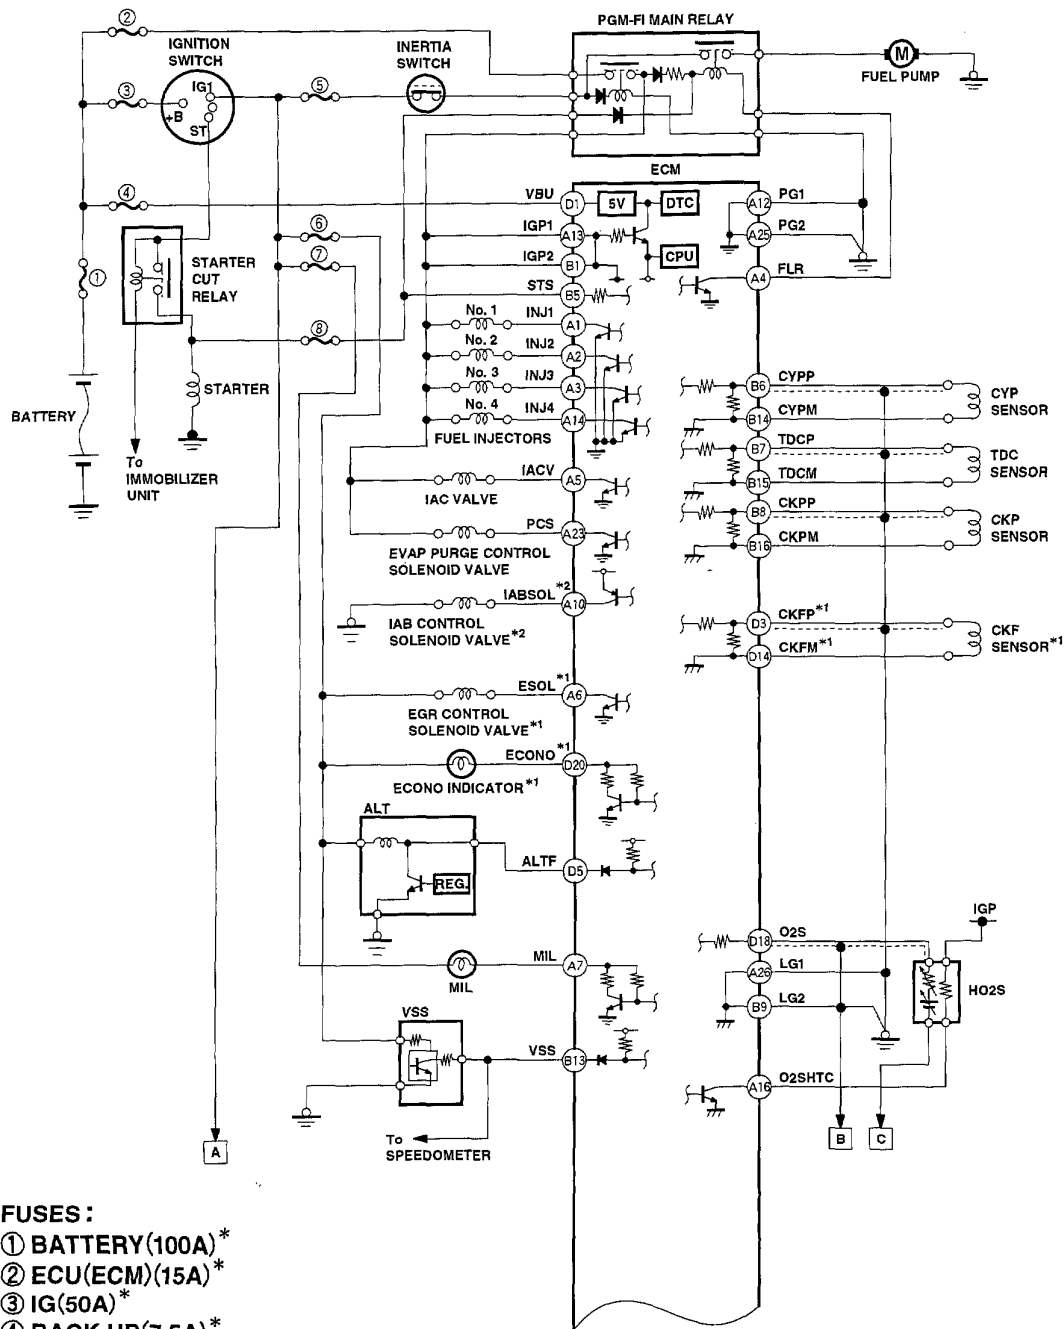

FUSES :

- ① BATTERY(100A)*
 - ② ECU(ECM)(15A)*
 - ③ IG(50A)*
 - ④ BACK UP(7.5A)*
 - ⑤ With SRS model : No. 24 FUEL PUMP(15A)
Without SRS model : No. 12 FUEL PUMP(15A)
 - ⑥ ACG(15A)**
 - ⑦ No. 15 BACK UP LIGHTS(10A)
 - ⑧ No. 18 STARTER SIGNAL(7.5A)
- *: in the under-hood fuse/relay box
**: in the fuse holder(located at the under-dash fuse/relay box)

*1 : D15Z8 engine

*2 : B18C4 engine

(cont'd)

System Description

Electrical Connections (cont'd)

