



Connector to Harness Index (cont'd)

Engine Wire Harness (2-door)

Connector or Terminal	Ref	Cavities	Location	Connects to	Notes
Alternator	21	4	Left side of engine compartment		
CKP sensor	19	3	Left side of engine compartment		
CVT drive pulley speed sensor	35	3	Transmission housing		
CVT driven pulley speed sensor	36	3	Transmission housing		
EGR valve and EGR valve position sensor	46	6	Right side of engine compartment		
Engine coolant temperature (ECT) sensor	28	2	Right side of engine compartment		
EVAP canister purge valve	15	2	Left side of engine compartment		
Idle air control (IAC) valve	6	3	Right side of engine compartment		
Ignition coil No. 1	20	3	Middle of engine		
Ignition coil No. 2	23	3	Middle of engine		
Ignition coil No. 3	25	3	Middle of engine		
Ignition coil No. 4	27	3	Middle of engine		
Injector No. 1	16	2	Middle of engine		
Injector No. 2	12	2	Middle of engine		
Injector No. 3	10	2	Middle of engine		
Injector No. 4	9	2	Middle of engine		
Intake air temperature (IAT) sensor	14	2	Left side of engine compartment		
Knock sensor	17	3	Left side of engine compartment		
MAP sensor	13	3	Left side of engine compartment		
PCM connector A	2	31	Under middle of dash		
PCM connector B	3	24	Under middle of dash		
PCM connector C	4	22	Under middle of dash		
Primary HO2S	29	4	Middle of engine		
Radiator fan switch	32	2	Right side of engine compartment		
Secondary gear shaft position sensor 1	38	3	Transmission housing		
Secondary gear shaft position sensor 2	39	3	Transmission housing		
Secondary HO2S	30	4	Middle of engine		
Solenoid connector	37	8	Transmission housing		
Starter solenoid	44	1	Right side of engine compartment		
TDC sensor	18	3	Right side of engine compartment		
Throttle position (TP) sensor	11	3	Left side of engine compartment		
Transmission range switch	42	10	Transmission housing		
Vehicle speed sensor (VSS)	45	3	Transmission housing		
VTEC oil pressure switch	47	2	Right side of engine compartment		
VTEC solenoid valve	7	1	Right side of engine compartment		
C101	5	20	Under middle of dash	ECM/PCM wire harness (see page 22-28).	AT
C102 (Junction Connector A)	1	20	Right side of engine compartment		
C103 (Junction Connector B)	26	24	Engine head cover		
C104 (Junction Connector C)	24	24	Engine head cover		
C105	8	1	Middle of engine compartment	Engine oil pressure switch subharness (see page 22-52).	
T1	40		Right side of engine compartment	Under-hood fuse/relay box	
T2	34		Middle of engine compartment	Starter motor	
(+)	33		Battery	Battery positive terminal	
T101	41		Under-hood fuse/relay box		
T102	22		Alternator		
G101	31		Middle of engine compartment	Engine ground via engine wire harness	
G102	43		Transmission housing	Engine ground via engine wire harness	*1

* 1: '02 - '03 model CVT

