


Radiator

Replacement

1. Drain the coolant from the radiator.
 - Remove the radiator cap to speed draining.
2. Remove the connectors from the cooling fan motor and thermostwitch.
3. Disconnect the upper and lower radiator hoses from cylinder head.
4. Remove the radiator bracket and radiator.

WARNING Use care when removing radiator to avoid scalding by hot coolant or steam.

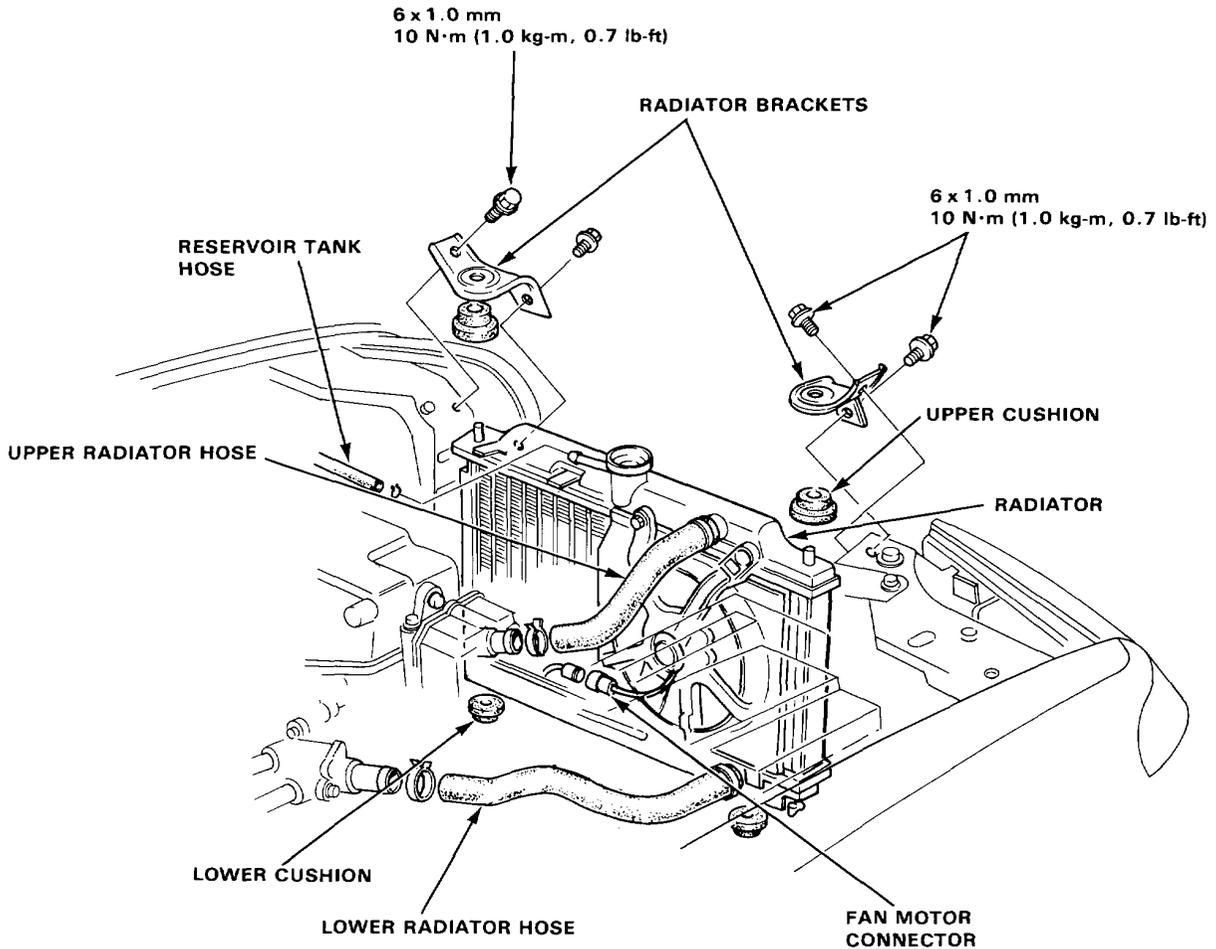

NOTE:

- Install the radiator in the reverse order of removal.
- Before installing the radiator, set the radiator lower cushion securely under it.