

Turn Signal/Hazard Flasher System




Component Location Index

LIGHTING/TURN SIGNAL SWITCH
Test, page 16-99
Replacement, page 16-100

TURN SIGNAL INDICATOR LIGHTS
(in the gauge assembly)
Gauge Assembly, page 16-71

HAZARD WARNING LIGHT
(in the gauge assembly)
Gauge Assembly, page 16-70

HAZARD SWITCH
Removal, page 16-112
Test, page 16-112

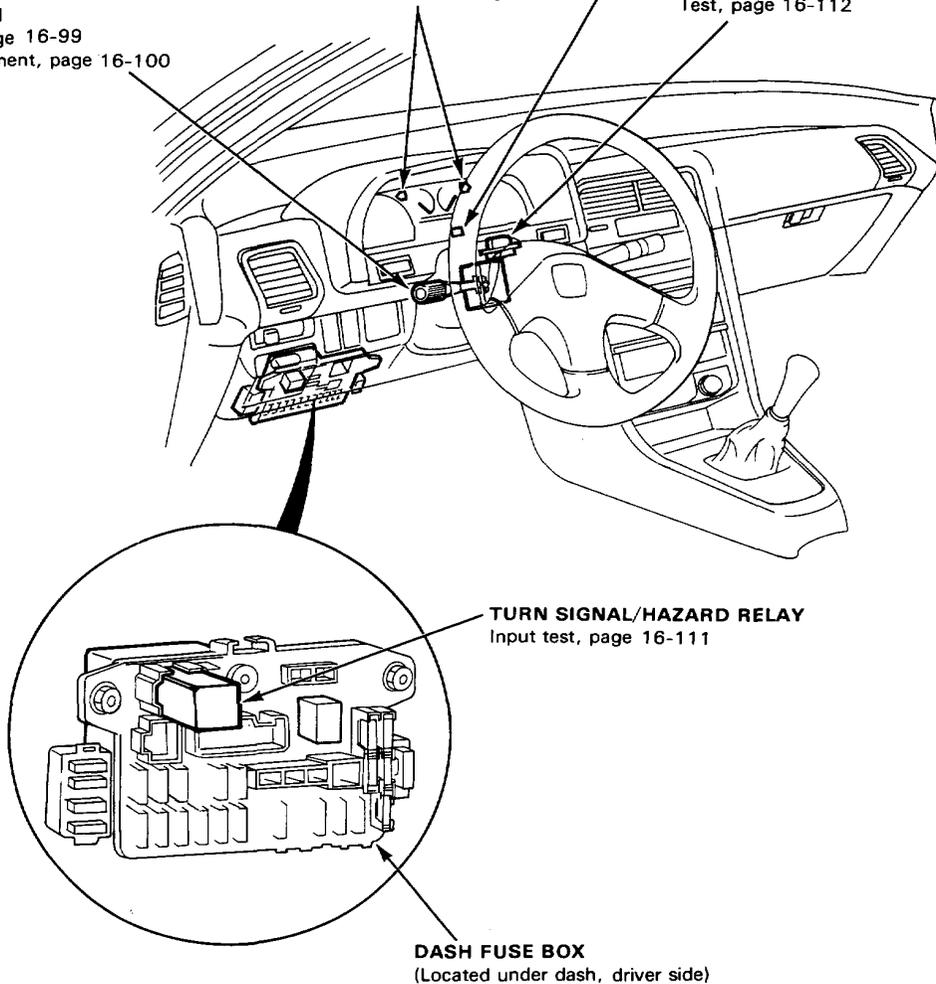

TURN SIGNAL/HAZARD RELAY
Input test, page 16-111

DASH FUSE BOX
(Located under dash, driver side)