



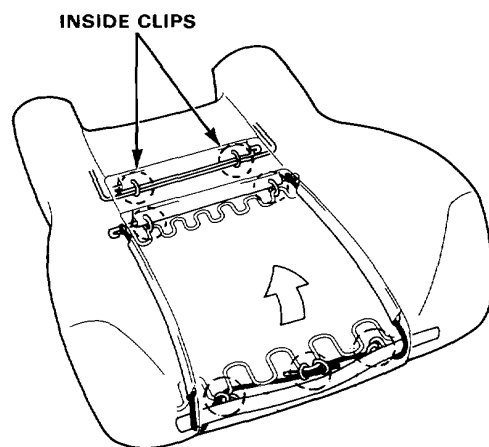

## Trim Cover Replacement



### Seat Back:

1. Separate the seat cushion and back. (page 14-46).
2. Remove the headrest and headrest guide (page 14-46).
3. Remove the lower clips.
4. Remove the inside clips, then remove the trim cover.

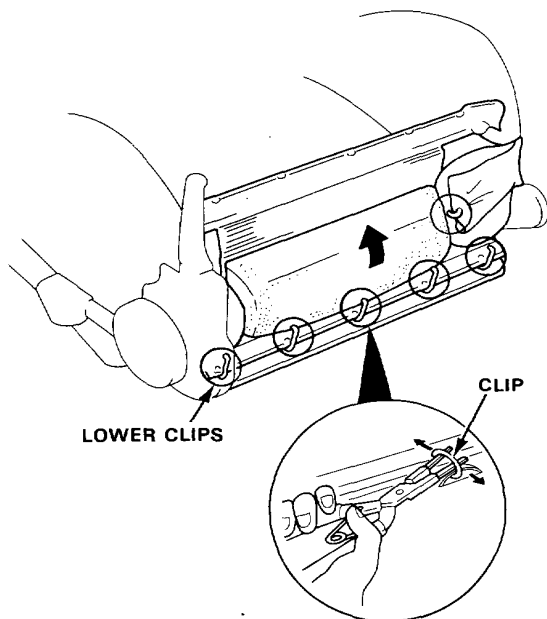

### seat cushion:

5. Remove the 14 clips and turn over the trim cover.
6. Remove the inside clips, then remove the trim cover.

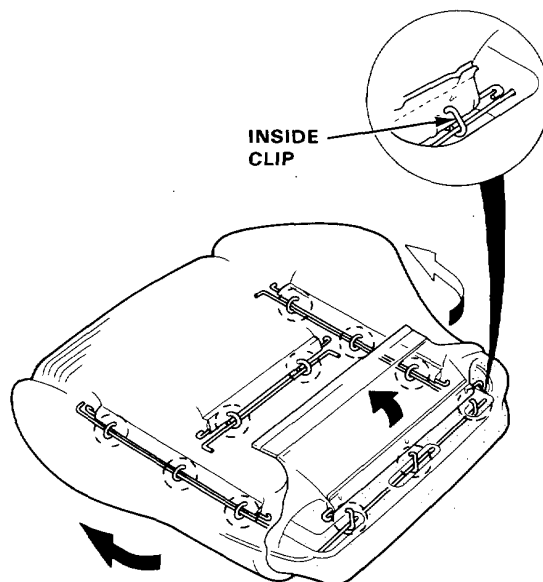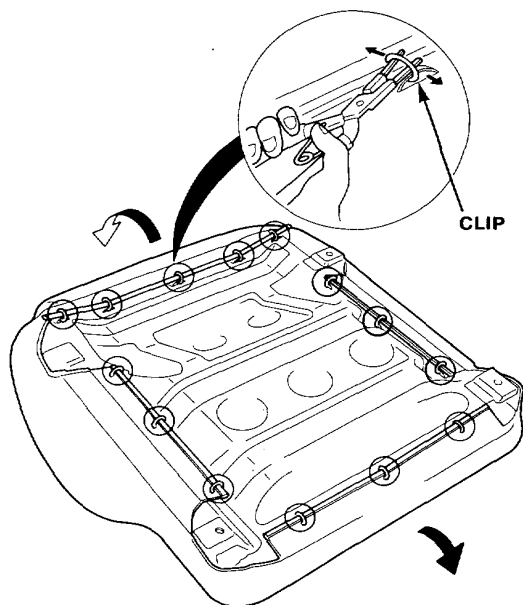

NOTE: To prevent wrinkles when installing a seat cover, make sure the material is stretched evenly over the frame before securing all the clips.