


Sunroof


Sunroof Panel Replacement

1. Open the sunroof.
2. Remove the rear stoppers by removing the attaching nuts.

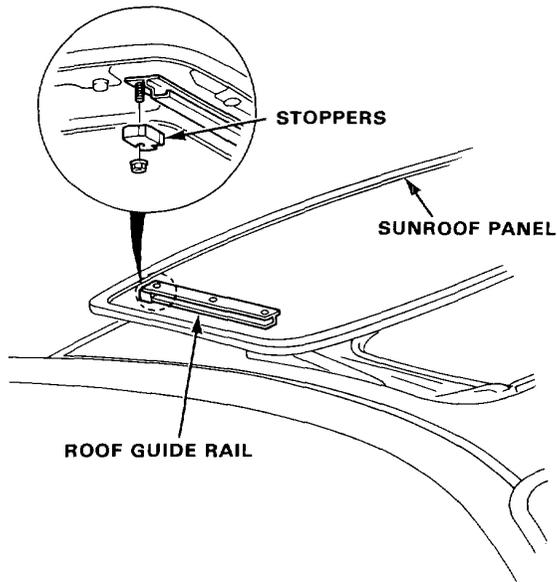

3. Remove the front mounting bolts. Remove the sunroof panel from the rear slide bracket by sliding it forward by hand.

NOTE: Use extreme care to avoid damaging the body when removing the panel.

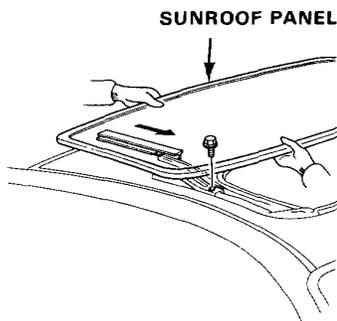

4. Install the sunroof panel in the reverse order of removal.


Seal Repair/Installation

If a seal is leaking, or if it is to be replaced, proceed as follows.

1. Remove the sunroof panel, remove the sunroof liner, front slide bracket and deflector slider.
2. Remove the seal holder. Carefully peel the seal off the sunroof panel.
3. Clean the seal attaching surfaces with a clean cloth dampened in alcohol.

NOTE: After cleaning, keep oil, grease or water from getting on the surface.

4. Fill the seal groove with adhesive. Coat the seal attaching surfaces of the sunroof panel with the same adhesive.

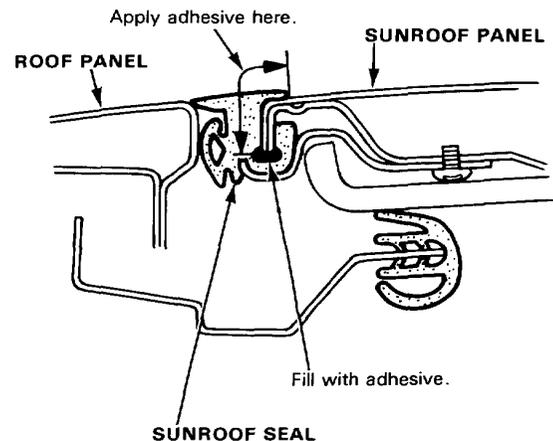

5. Fit the seal onto the sunroof panel evenly all the way around.
6. Wipe off excess adhesive with a clean cloth dampened with alcohol.
7. Allow the adhesive to cure for at least 4 hours after seal installation and before operating the sunroof.