



Timing Belt

Replacement


1. Remove the wheel well splash shield.

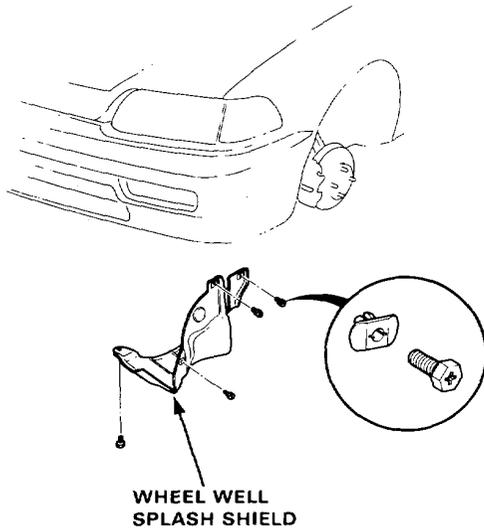


2. Remove the power steering (P/S) pump (KQ).
3. Loosen the air conditioning (A/C) idle pulley and remove the A/C belt.

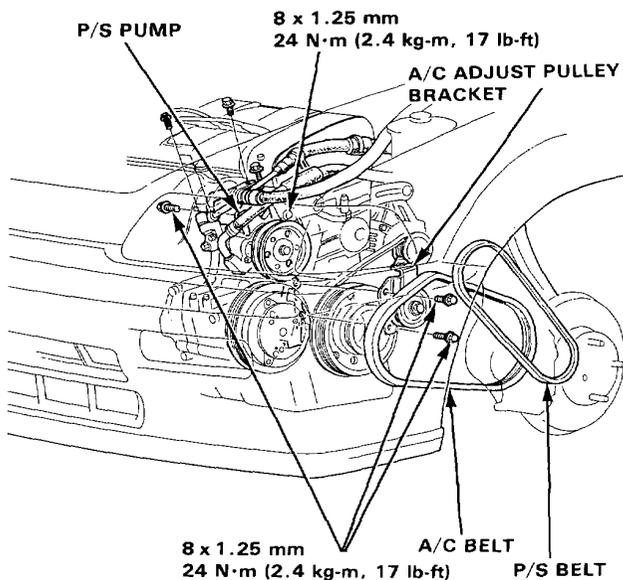


4. Remove the P/S bracket (KQ).
5. Loosen the alternator adjust bolt and through bolt, then remove the belt.

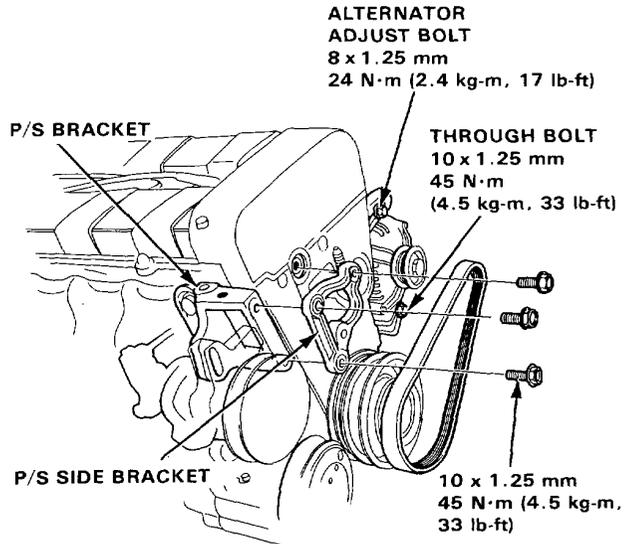


6. After installation, adjust the tension of each belt. See page 5-6 for alternator belt tension adjustment. See page 5-7 for A/C compressor belt tension adjustment. See page 5-7 for P/S pump belt tension adjustment.
7. Remove the engine support bolts and nut, then remove the side mount rubber.

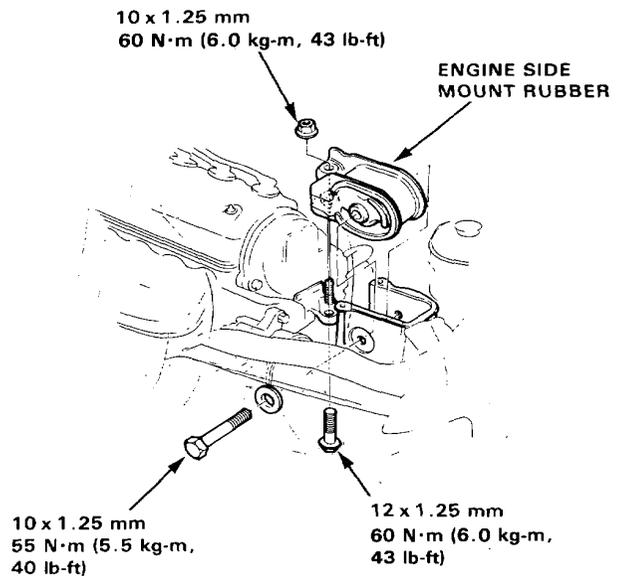



6. Remove the timing belt upper cover.
7. Remove the valve cover.
8. Remove the special bolt, then remove crankshaft pulley.
9. Remove the timing belt lower cover.
10. Loosen the adjust bolt, then remove the timing belt.

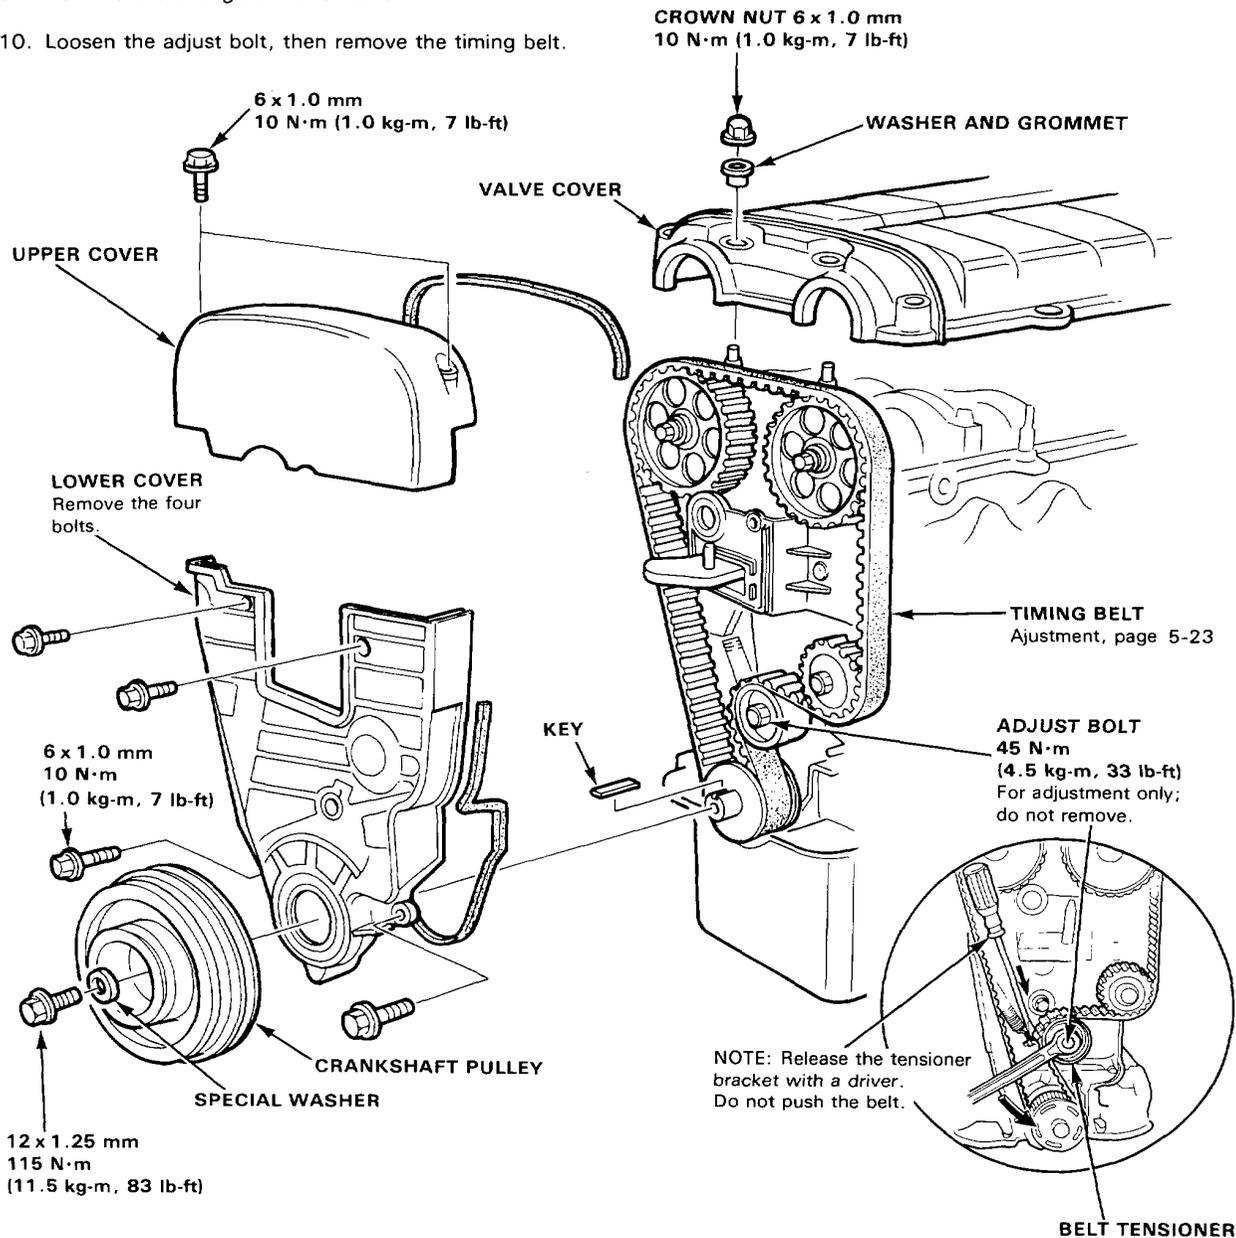

11. Install in the reverse order of removal; adjust the valve timing (page 5-26).
12. Carry out timing belt tension adjustment (page 5-23).