


Component Locations




Index

SOHC With CATA

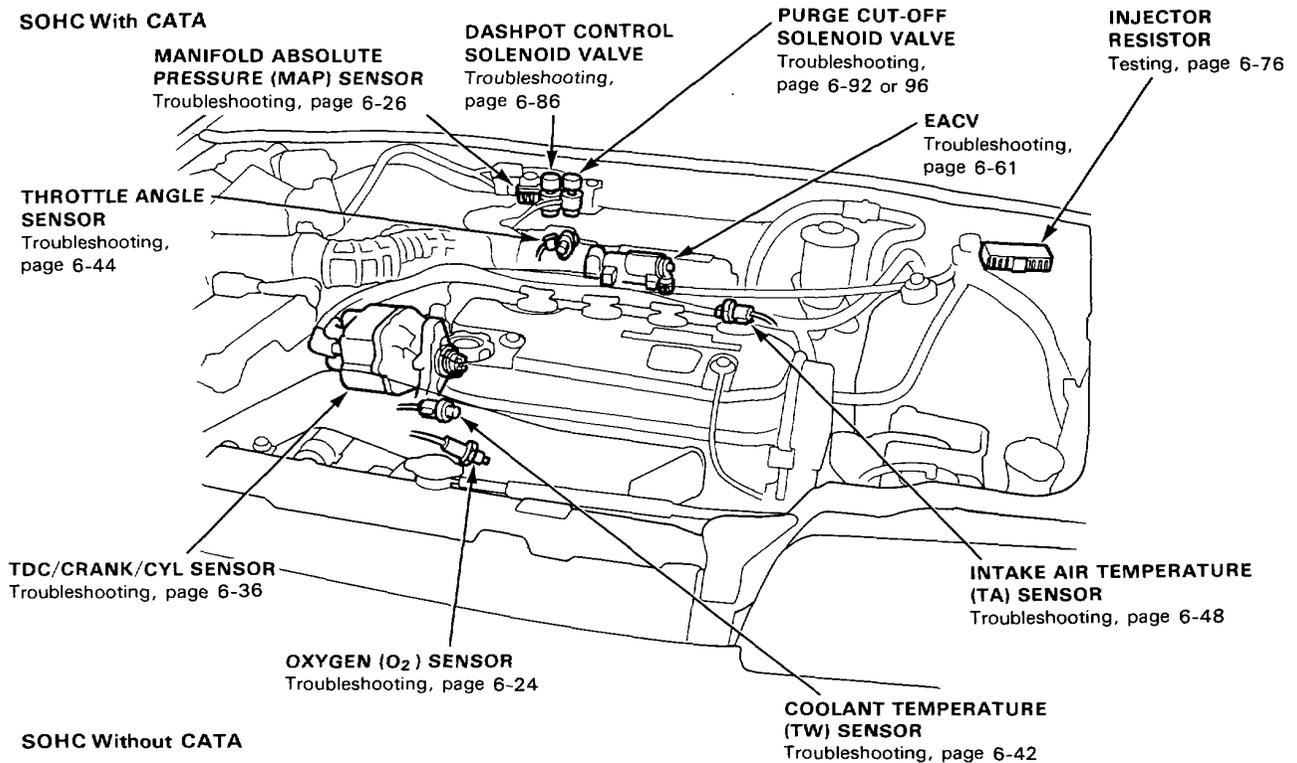

SOHC Without CATA

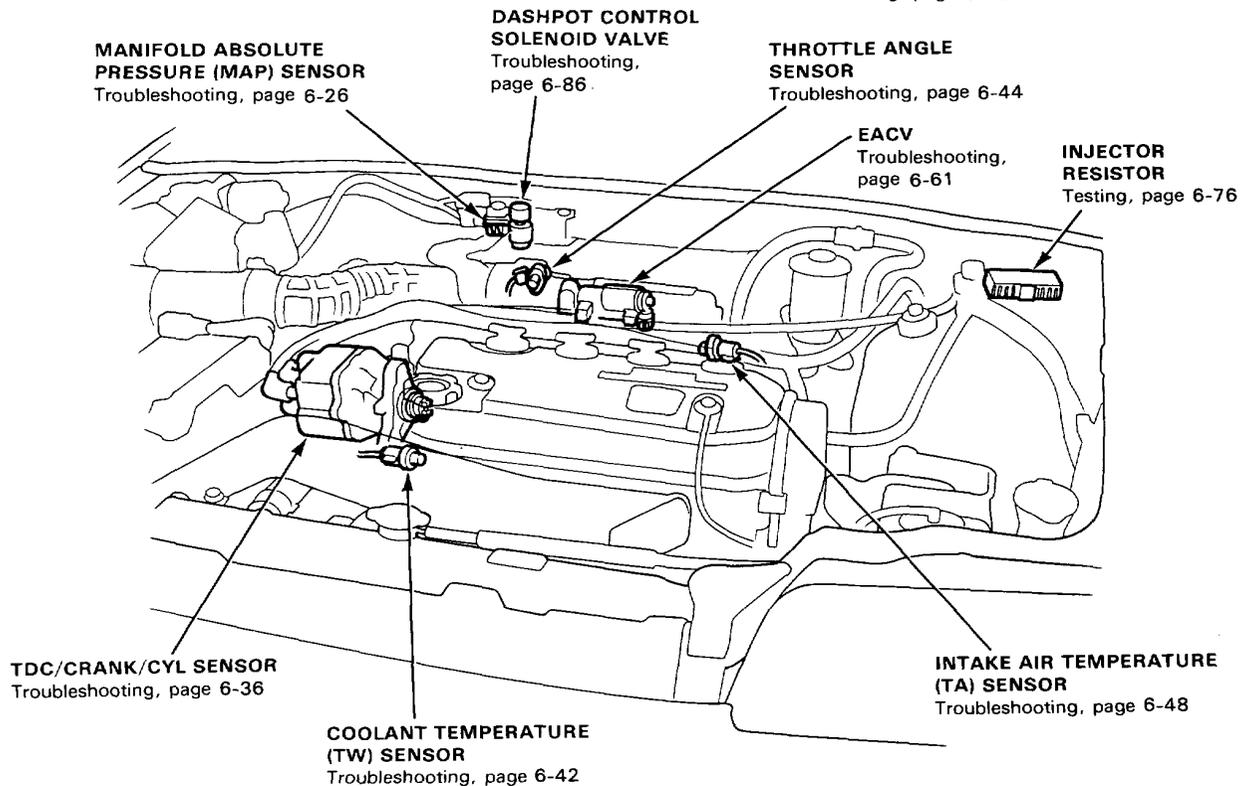

Component Locations

Index

DOHC without CATA

MANIFOLD ABSOLUTE PRESSURE (MAP) SENSOR
Troubleshooting, page 6-26

DASHPOT CONTROL SOLENOID VALVE
Troubleshooting, page 6-86

THROTTLE ANGLE SENSOR
Troubleshooting, page 6-44

TDC/CRANK SENSOR
Troubleshooting, page 6-32

EACV
Troubleshooting, page 6-61

INJECTOR RESISTOR
Testing, page 6-76

CYL SENSOR
Troubleshooting, page 6-46

INTAKE AIR TEMPERATURE (TA) SENSOR
Troubleshooting, page 6-48

COOLANT TEMPERATURE (TW) SENSOR
Troubleshooting, page 6-42

DOHC with CATA

MANIFOLD ABSOLUTE PRESSURE (MAP) SENSOR
Troubleshooting, page 6-26

DASHPOT CONTROL SOLENOID VALVE
Troubleshooting, page 6-86

PURGE CUT-OFF SOLENOID VALVE
Troubleshooting, page 6-92

EACV
Troubleshooting, page 6-61

TDC/CRANK SENSOR
Troubleshooting, page 6-32

CYL SENSOR
Troubleshooting, page 6-46

INJECTOR RESISTOR
Testing, page 6-76

INTAKE AIR TEMPERATURE (TA) SENSOR
Troubleshooting, page 6-48

OXYGEN (O₂) SENSOR
Troubleshooting, page 6-24

COOLANT TEMPERATURE (TW) SENSOR
Troubleshooting, page 6-42


THROTTLE ANGLE SENSOR
Troubleshooting, page 6-44




LHD

IMA SENSOR [Without CATA]
Troubleshooting, page 6-50

ATMOSPHERIC PRESSURE (PA) SENSOR
Troubleshooting, page 6-52

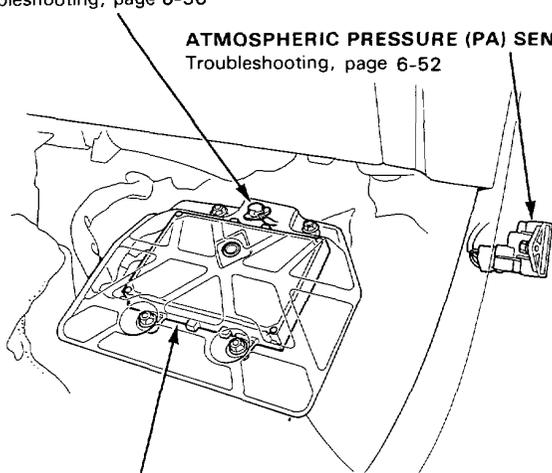


ELECTRONIC CONTROL UNIT (ECU)
Troubleshooting, page 6-21

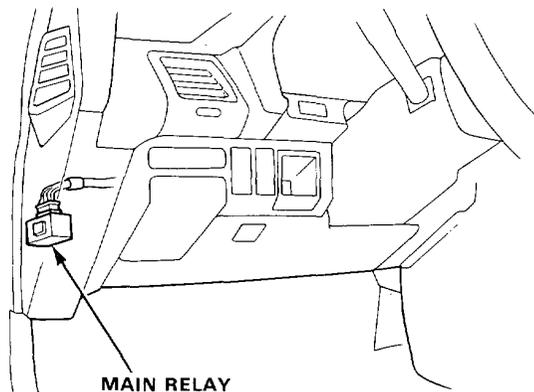

MAIN RELAY
Relay Testing, page 6-79
Harness Testing, 6-80


RHD

IMA SENSOR [KE]
Troubleshooting, page 6-50

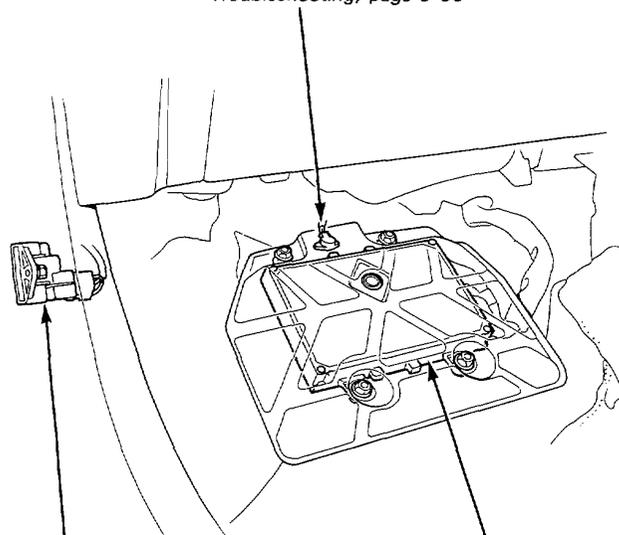

ATMOSPHERIC PRESSURE (PA) SENSOR [KE]
Troubleshooting, page 6-52

ELECTRONIC CONTROL UNIT (ECU)
Troubleshooting, page 6-21

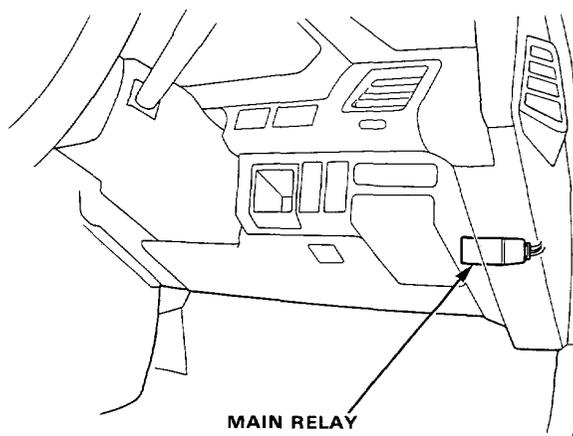

MAIN RELAY
Relay Testing, page 6-79
Harness Testing, 6-80

Component Locations

Index

AIR CLEANER ELEMENT

- EC, KQ: Replace every 2 years or 40,000 km (24,000 miles) whichever comes first.
- Others: Replace every 1 year or 20,000 km (12,000 miles) whichever comes first.

THROTTLE BODY

- Inspection, page 6-84
- Disassembly, page 6-85

DASHPOT DIAPHRAGM

- Troubleshooting, page 6-86

THROTTLE CABLE

- Inspection/Adjustment, page 6-83
- Installation, page 6-83

RESONATOR

AIR INTAKE TUBE

CHARCOAL CANISTER [With CATA]

- Troubleshooting, page 6-92 or 96

FUEL FEED PIPE

FUEL PUMP

- Testing, page 6-78
- Replacement, page 6-79

FUEL VAPOR PIPE

FUEL FILLER CAP

FUEL FILTER

- Replacement, page 6-77

FUEL INJECTORS

- Troubleshooting, page 6-72
- Replacement, page 6-75

PRESSURE REGULATOR

- Testing, page 6-76
- Replacement, page 6-77

FUEL RETURN PIPE

FUEL GAUGE SENDING UNIT

- Testing, section 16

TWO-WAY VALVE

- Testing, page 6-100