


## Latch Switch


### Test/Replacement

1. Open the hatch and remove the rear panel lining.
2. Disconnect the 2-P connector from the hatch latch.
3. There should be continuity between the A terminal and body ground.

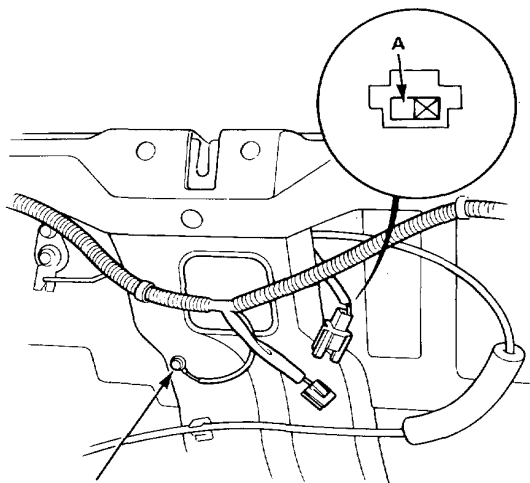

BODY GROUND

4. If necessary, remove the 3 bolts to pull out the latch from the trunk, then disconnect the lock rod from the latch.
5. Disconnect the hatch opener cable from the latch.

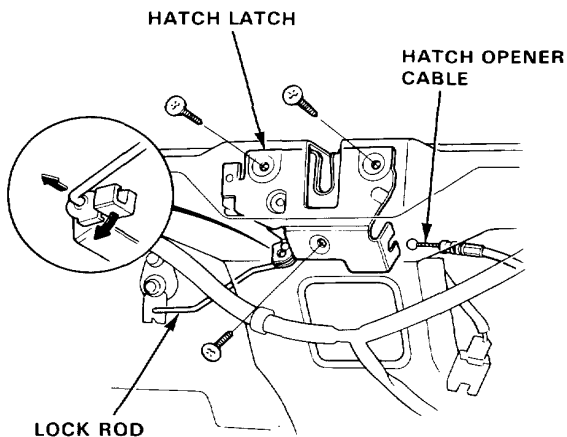

## Back-Up Lights

### Circuit Diagram

