


Dome Light

Test

1. Turn the light switch OFF.
2. Pry off the lens.
3. Remove the screw and the housing.
4. Disconnect the two connectors from the housing.

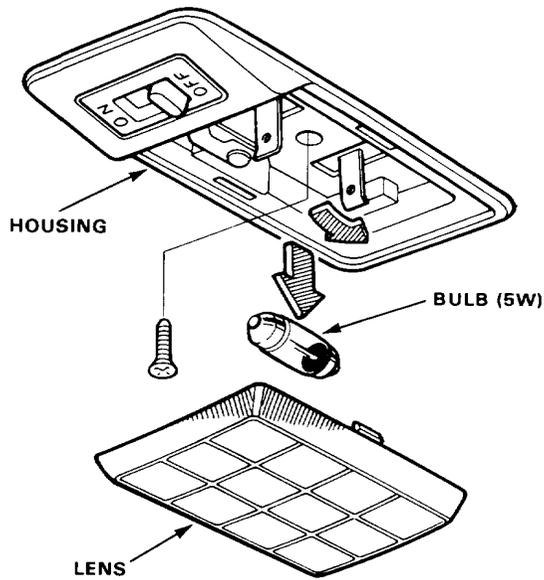

5. Check for continuity between the terminals in each switch position according to the table.

Terminal Position	A	B or B'	C		D
OFF			○	⊗	○
MIDDLE		○	○	⊗	○
ON	○		○	⊗	○

