




Catalytic Converter

Inspection

If excessive exhaust system back-pressure is suspected, remove the catalytic converter from the car and make a visual check for plugging, melting or cracking of the catalyst. Replace the catalytic converter if more than 50% of the visible area is damaged or plugged.

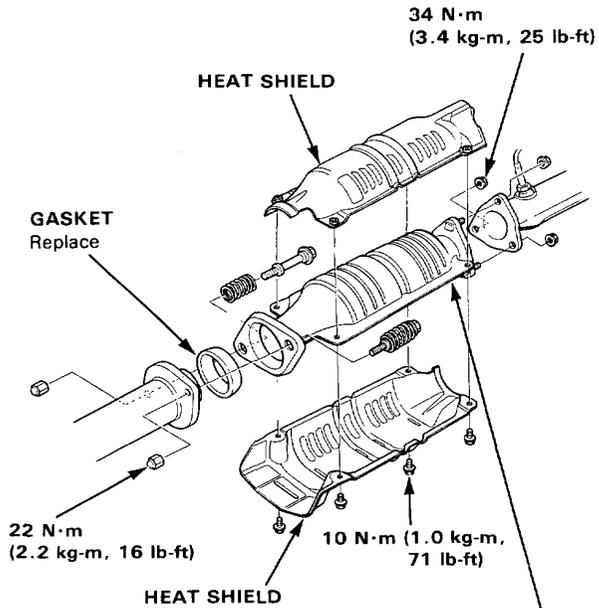

CATALYTIC CONVERTER

Removal Installation, section 5
Inspect housing for cracks or other damage.
Inspect element for clogging by looking through the inside.