


Test




Fan Switch

1. Disconnect the 6P connector from the fan switch.
2. Check for continuity between the terminals of the fan switch according to the table below.


SWITCH CONNEHTION

Terminal No.	①	②	③	④	⑤	⑥
OFF						
1	○			○		○
2	○	○				○
3	○				○	○
4	○		○			○

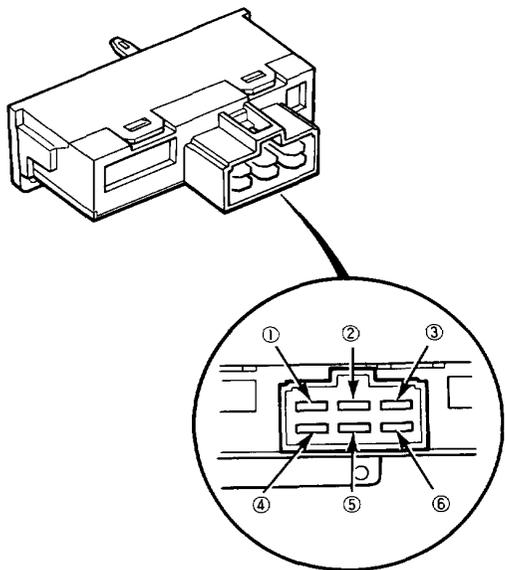

Recirculation Control Motor

1. Connect the battery positive to the ③ terminal of the recirculation control motor connector and negative to ② terminal.
2. Using a jumper wire connect the ② terminal and ① or ④ terminal.
 - On the recirculation door REC position, the motor should turn with the ② terminal connected to ① terminal.
 - On the door FRESH position, the motor should turn with the ② terminal connected to ④ terminal.
4. The motor automatically stops after half turn with the jumper wire connected.

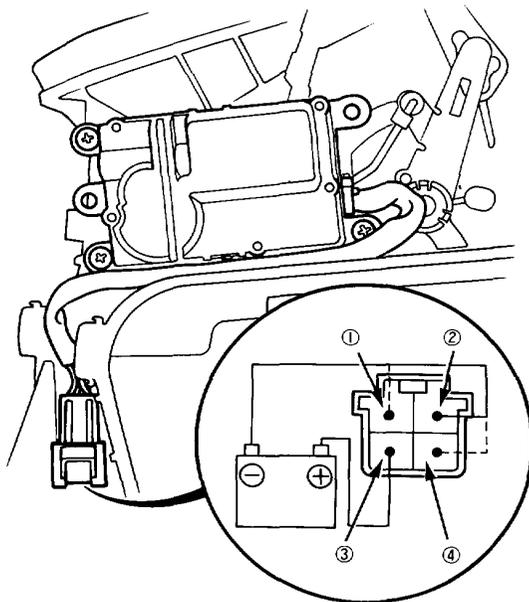

View from terminal side