



Thermostat



Replacement

NOTE: Use new gaskets and O-rings whenever reassembling.

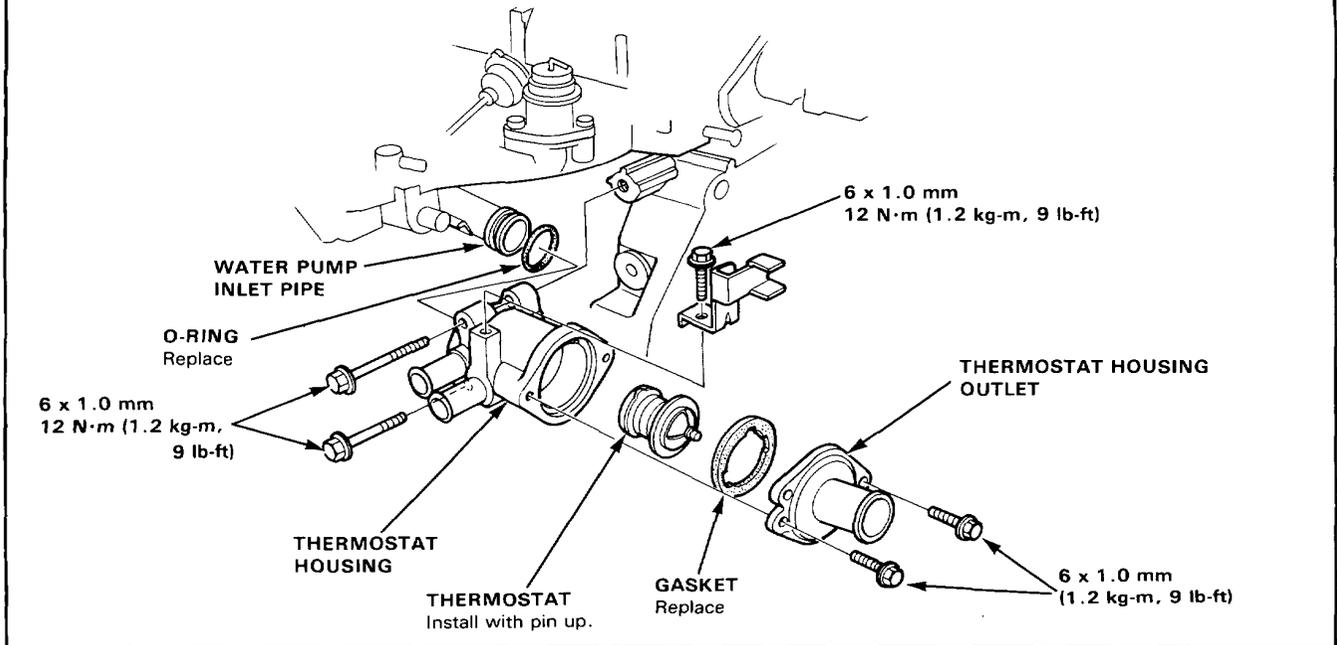

Testing

Replace thermostat if it is open at room temperature.

To test a closed thermostat:

1. Suspend the thermostat in a container of water as shown.
2. Heat the water and check the temperature with a thermometer. Check the temperature at which the thermostat first opens and at full lift.

CAUTION: Do not let thermometer touch bottom of hot container.

3. Measure lift height of thermostat when fully open.

STANDARD THERMOSTAT

Lift height: 8 mm (0.31 in.)
Starts opening: 78°C ± 2°C (172°F ± 3°F)
Fully open: 90°C (194°F)

