



Systems Description

Electrical Connections [With CATA]

FUSES

- ① ECU (15A)*
 - ② No. 14 (10A)
 - ③ No. 2 (10A)
 - ④ No. 1 (10A)
 - ⑤ HAZARD (10A)*
- * : In the main fuse box

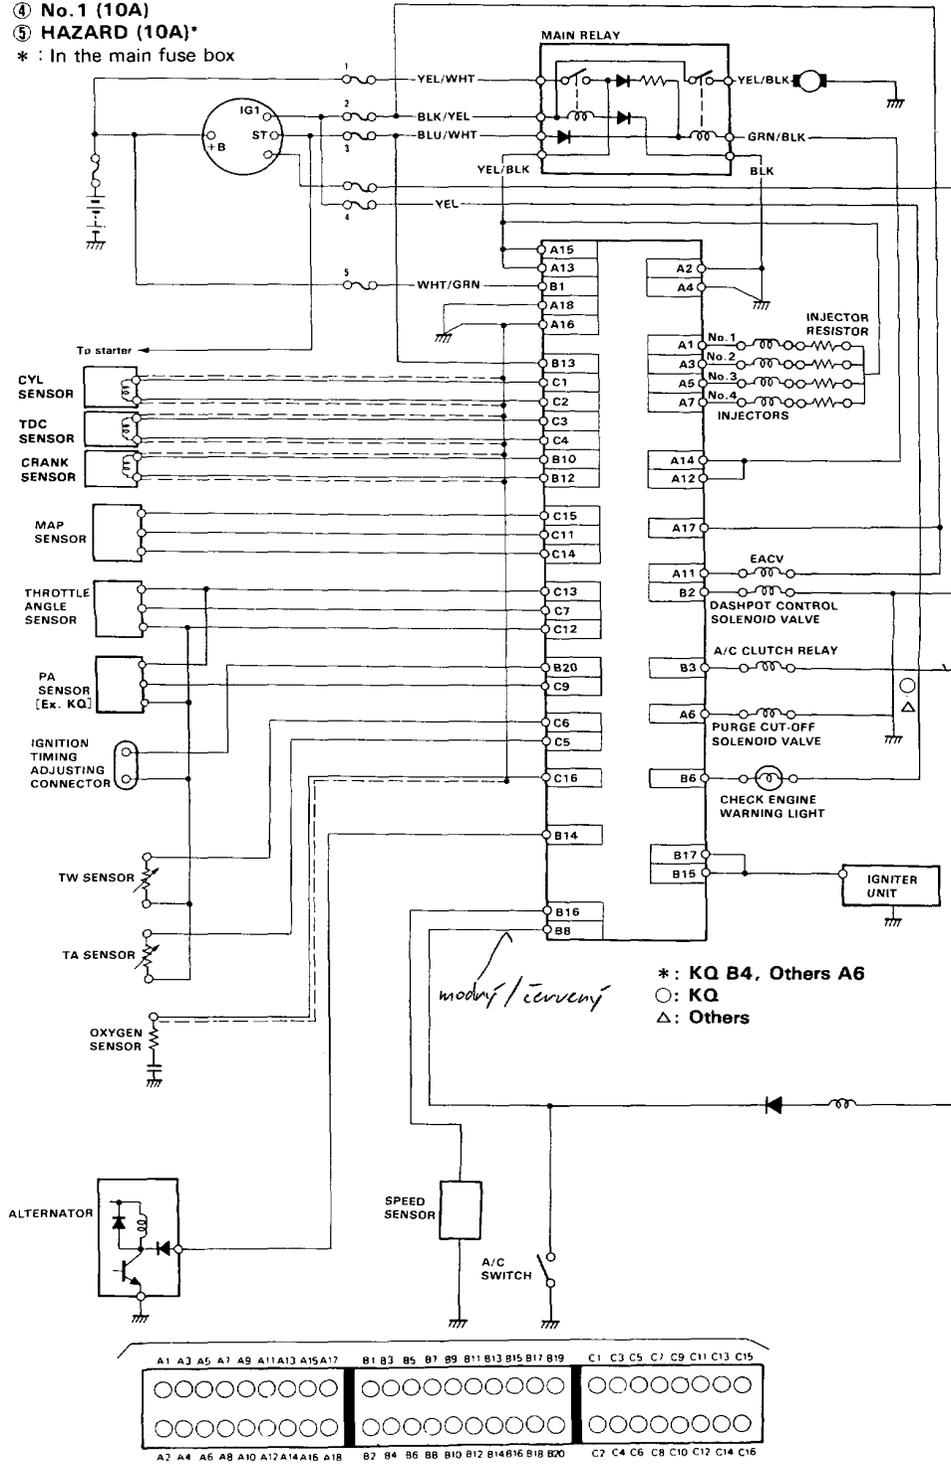


TERMINAL LOCATION



Electrical Connections [Without CATA]

FUSES

- ① ECU (15A)*
 - ② No. 14 (10A)
 - ③ No. 2 (10A)
 - ④ No. 1 (10A)
 - ⑤ HAZARD (10A)*
- * : In the main fuse box

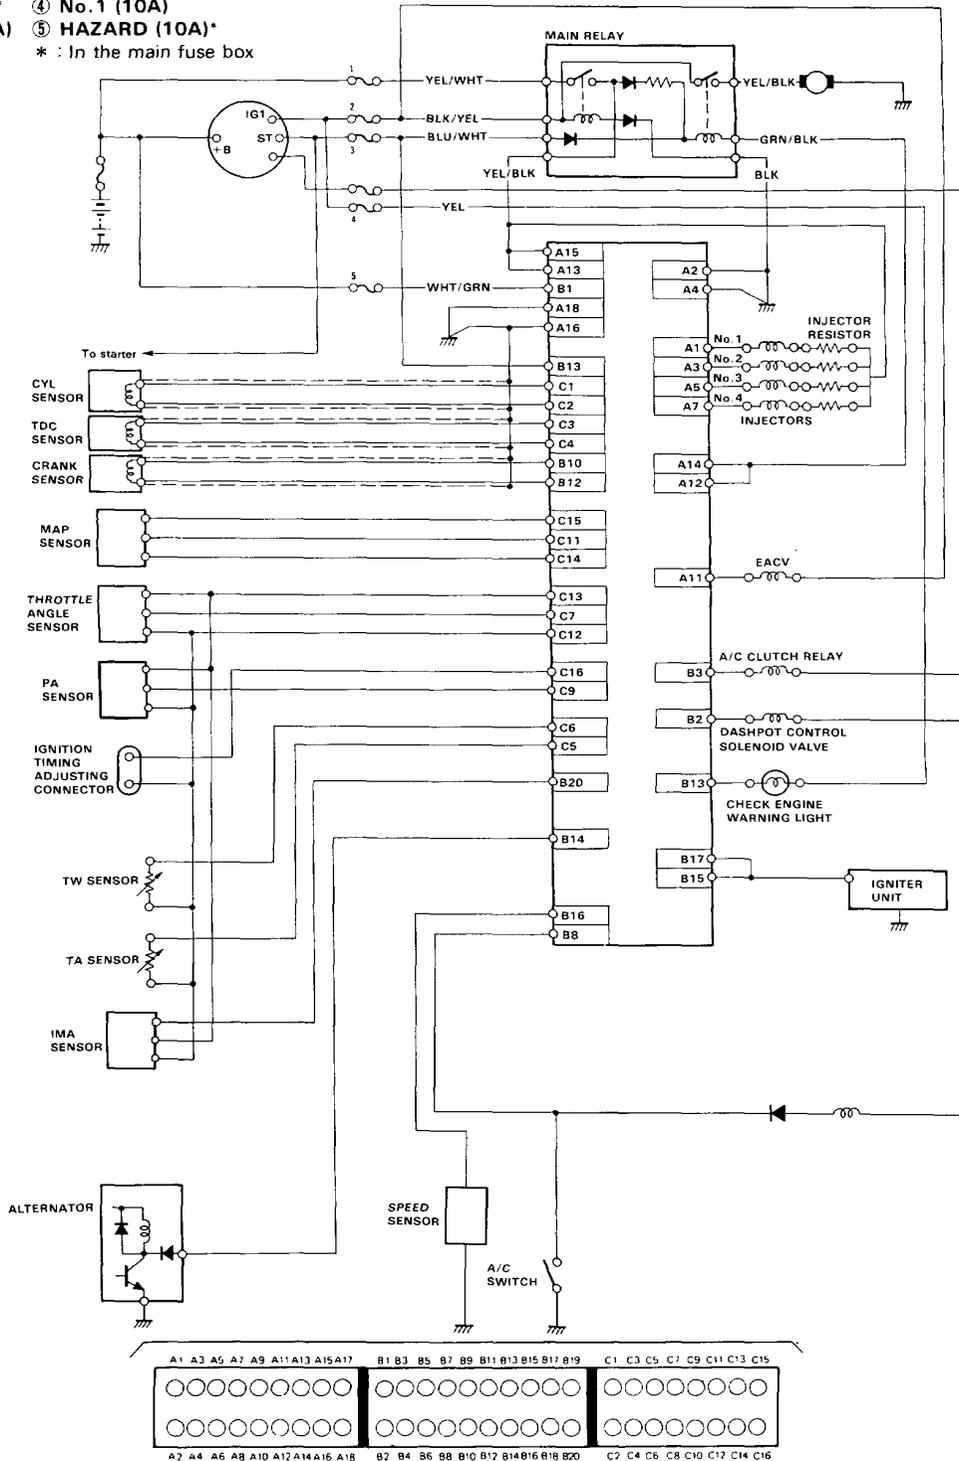

TERMINAL LOCATION