



Rear Suspension

Upper Arm Bushing Replacement

1. Remove the upper arm bushing and inner bushing as shown.

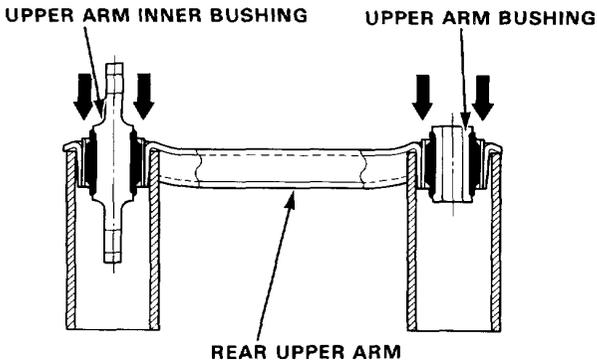


2. Mark a scribe line on the upper arm inner bushing so that it is in line with the bolt mounting surface.
3. Mark on the upper arm at two points so that they are in line and make a right angle with the arm as shown in the drawing.

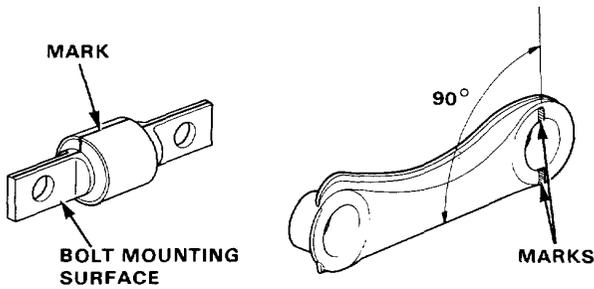


4. Drive in the upper arm inner bushing with the marks aligned.
5. Drive the upper arm bushing into the upper arm.

NOTE: Drive in the upper arm bushing and inner bushing until their leading edges are flush with the upper arm.

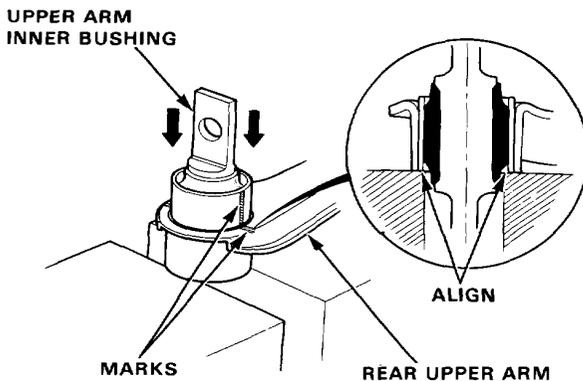

Compensator Arm Bushing Replacement

1. Drive the compensator arm bushing out of the compensator from the direction indicated.

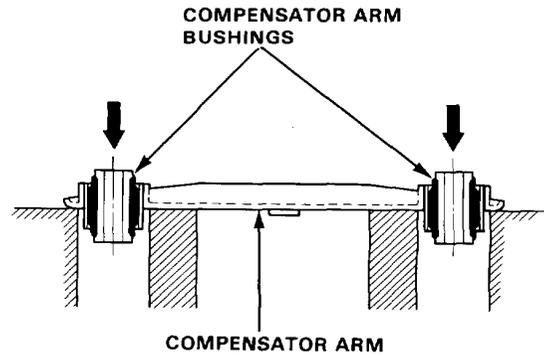

2. Drive in the compensator arm bushings from the direction indicated.

NOTE: Drive in the compensator arm bushings so that their leading edges are flush with the compensator arm.

