


# Fuel Filler/Tailgate Opener



## Replacement

1. To remove the opener cables, remove the following parts:
  - Left side door sill molding, left half of carpet.
  - Left quarter trim panel, and rear trim panel.
2. Remove the screw and the release levers, then remove the opener cover. Remove the opener by removing the 2 bolts.
3. Remove the fuel lid latch by turning it 90°.
4. Remove the bolt, then remove the tailgate lock cylinder.
5. Remove the 3 screws, then remove the tailgate latch.
6. Disconnect the opener cable, connector and lock rod.

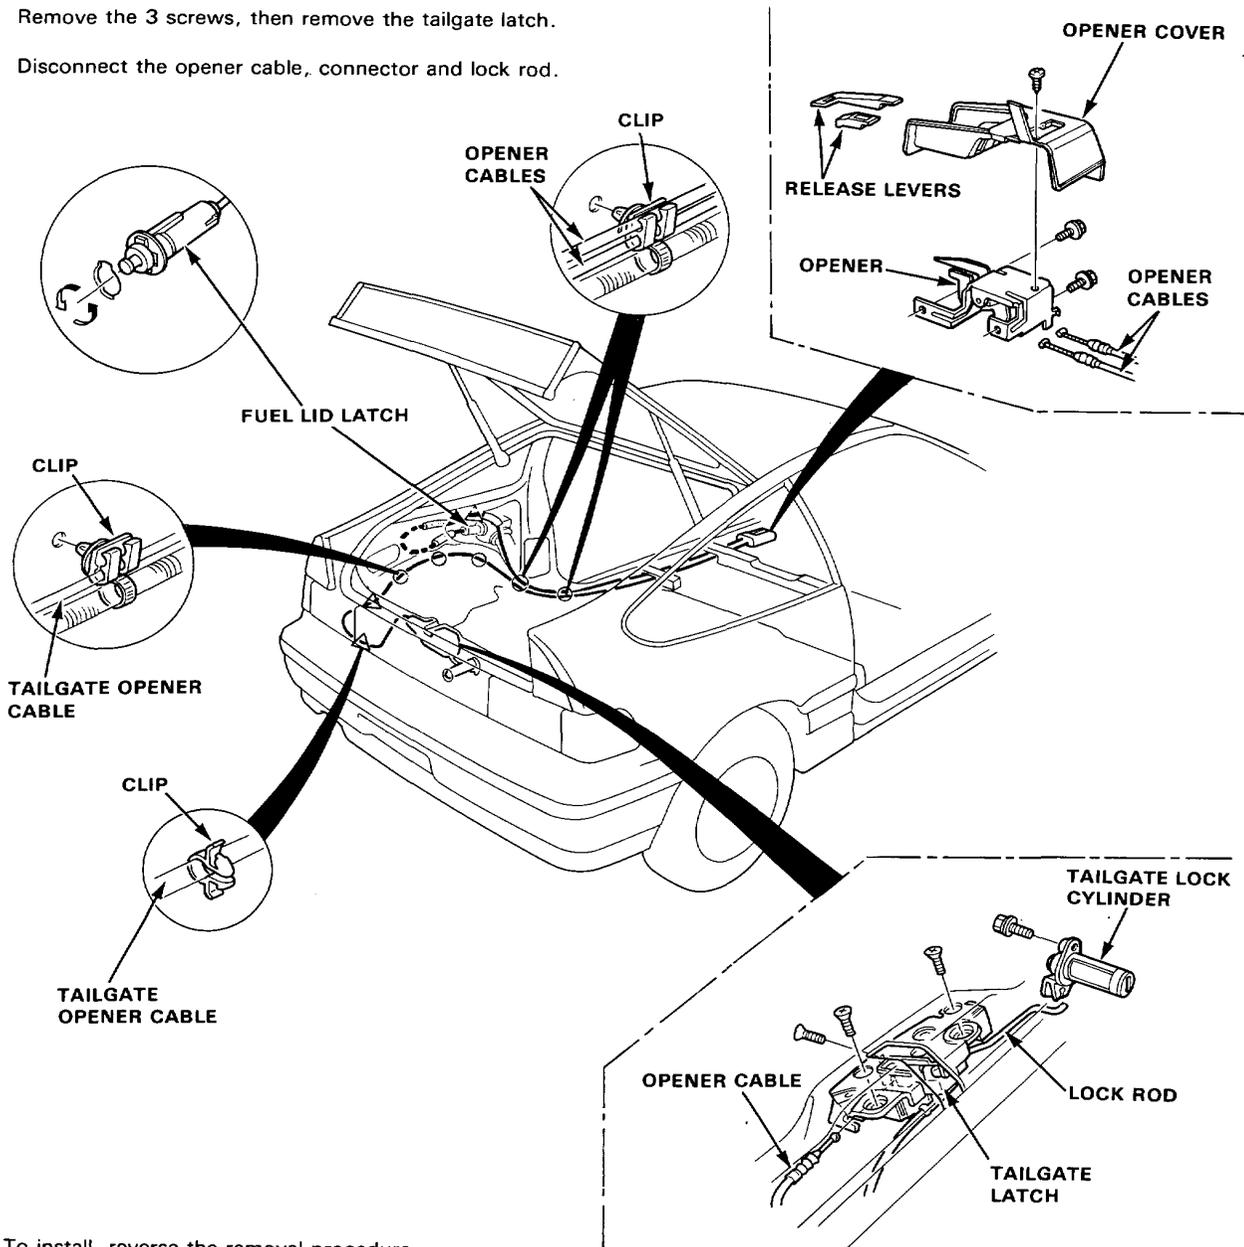

7. To install, reverse the removal procedure.  
Check that the tailgate and fuel lid opener cables are routed and connected properly.