




## Overhaul

1. Remove the heater assembly.
2. Remove the tapping screws (2) and heater core cover.
3. Remove the tapping screw and clamp.
4. Pull out the heater core from the heater housing.
5. Remove the function control motor if necessary.

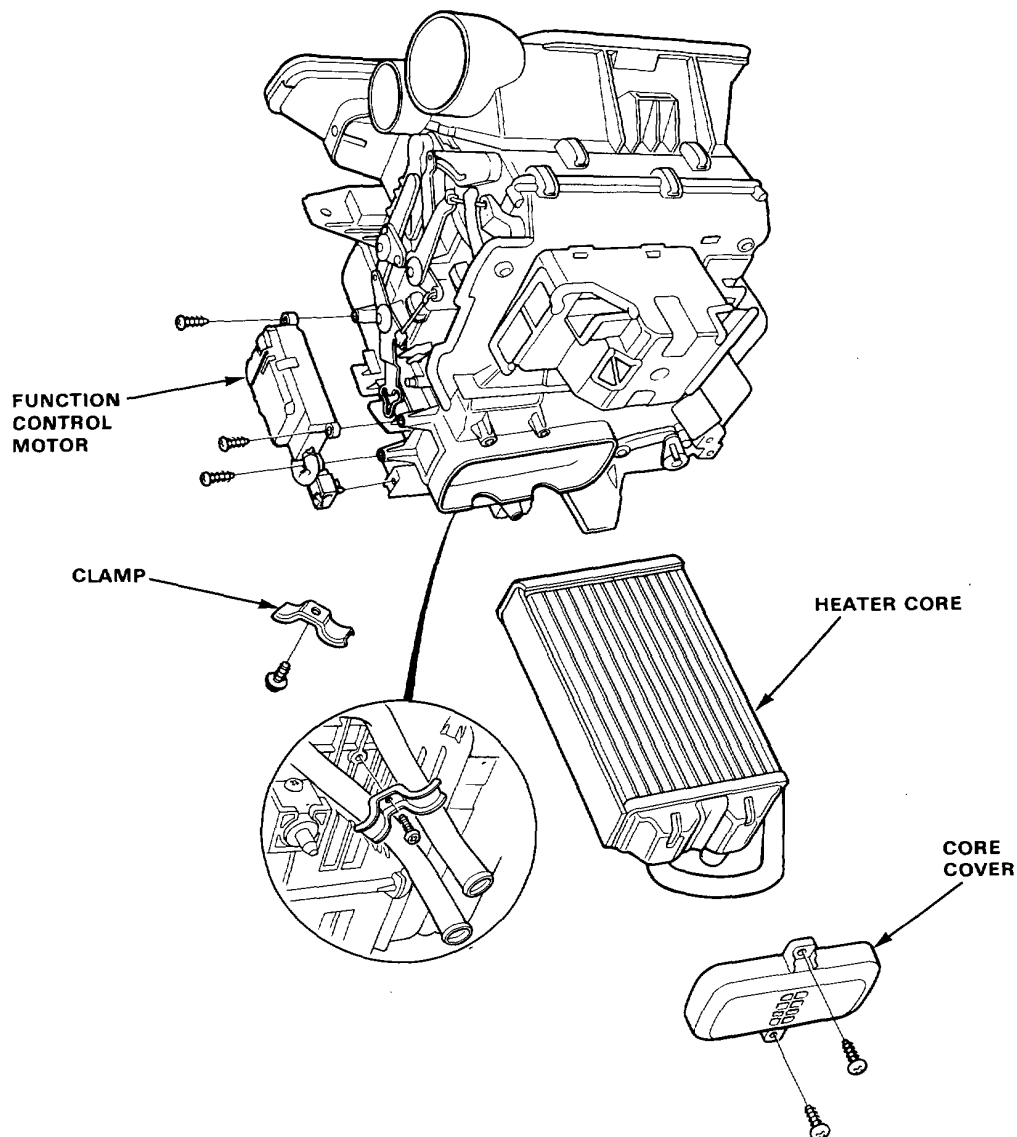

**Install in the reverse order of removal and:**

Loosen the bleed bolt on the engine and refill the radiator and reservoir tank with the proper coolant mixture. Tighten the bleed bolt when all the trapped air has escaped and coolant begins to flow from it.