




# Troubleshooting

## Flow Chart — Function Control

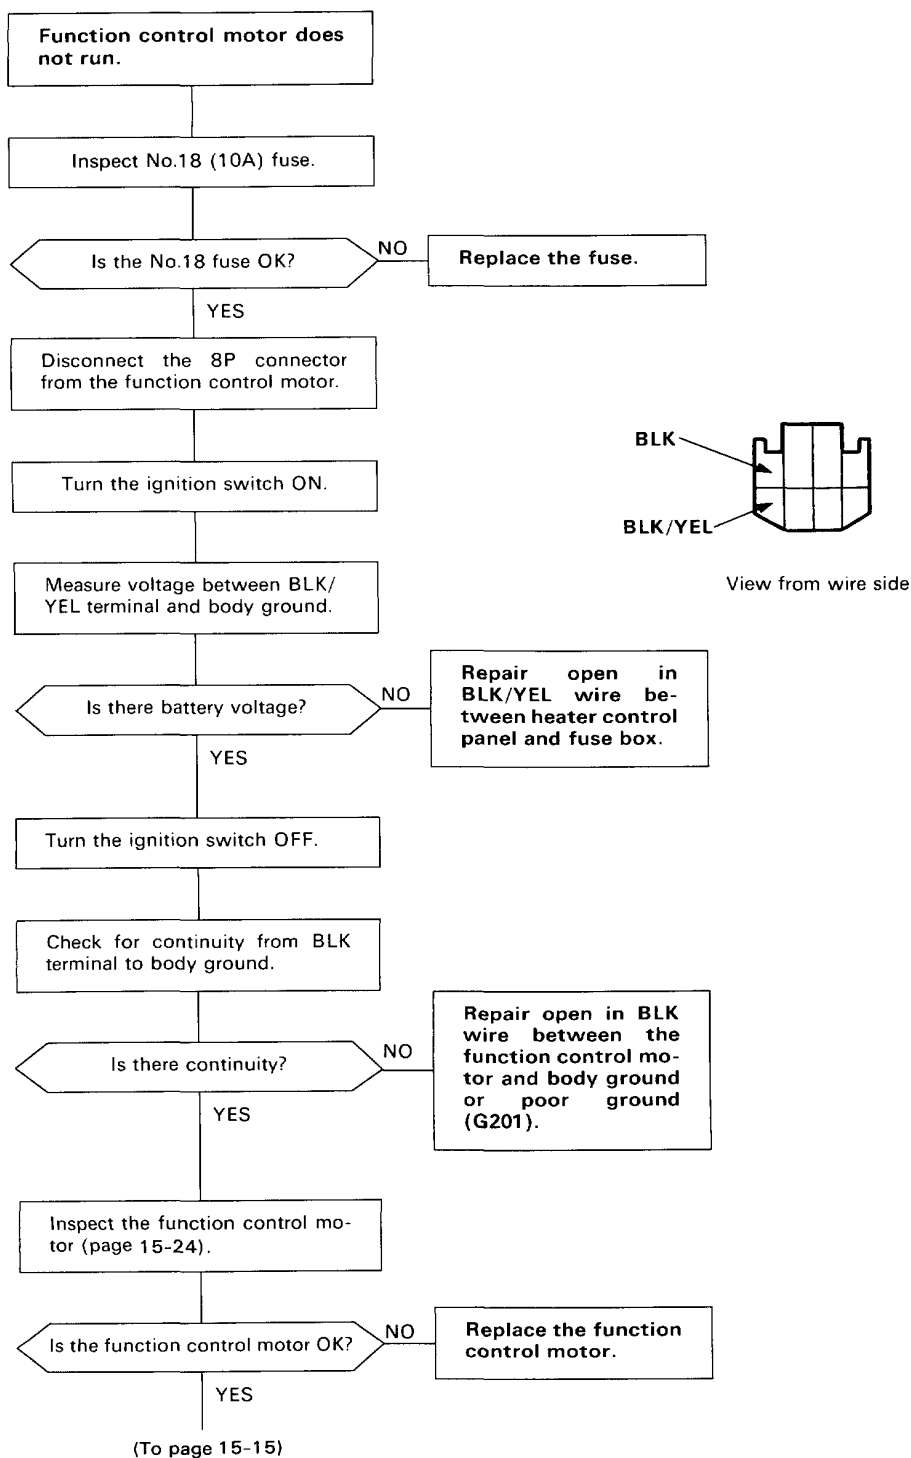




(From page 15-14)

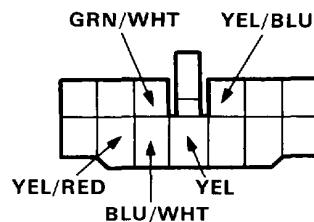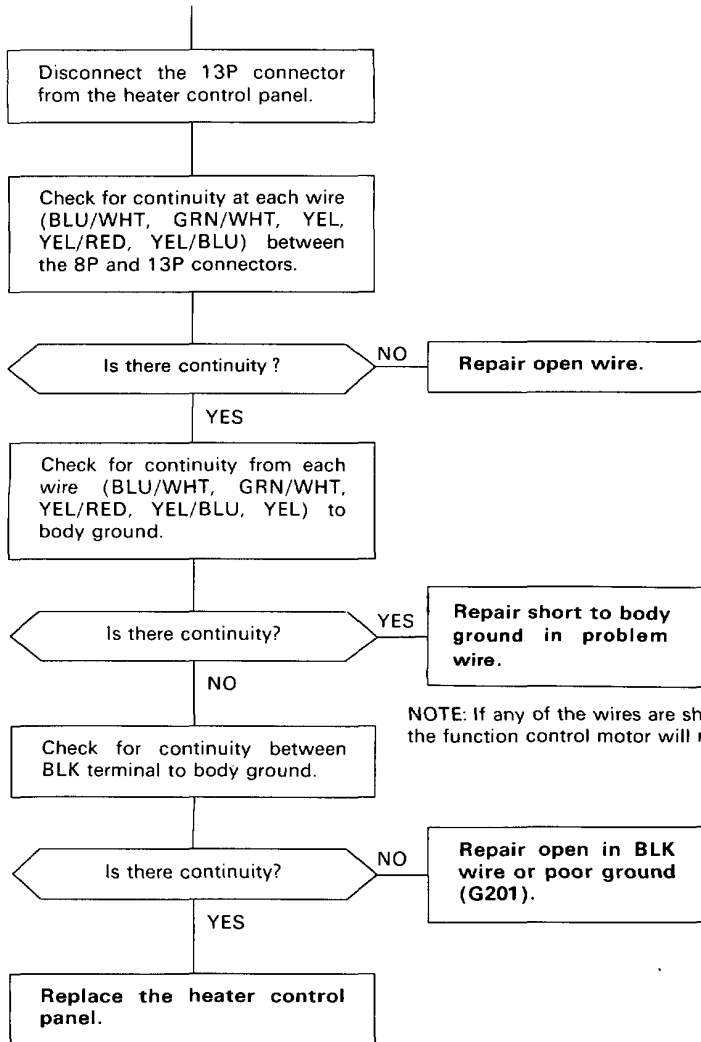

View from wire side

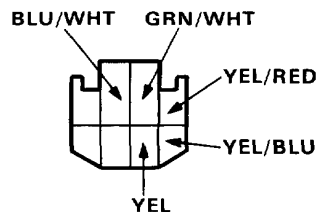

View from wire side

NOTE: If any of the wires are shorted to ground, the function control motor will not change positions.