


## Replacement

### CAUTION:

- Halogen headlights can become very hot in use; do not touch them or the attaching hardware immediately after they have been turned off.
- Do not try to replace or clean the headlights with the lights on.

1. Disconnect the 3-P connector from behind the unit.
2. Remove the front bumper and 4 mount bolts, then remove the unit.

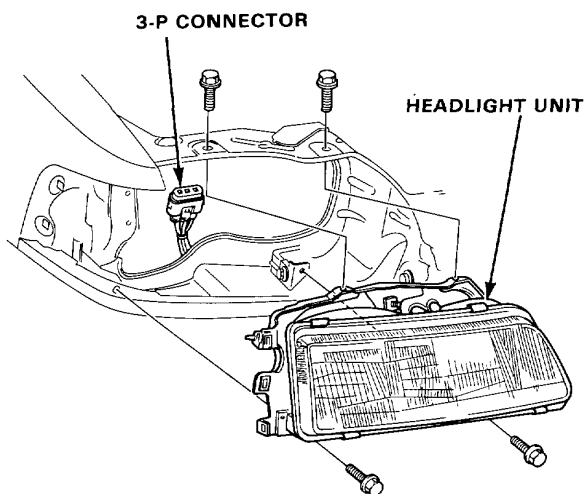


3. After installing the unit, adjust the headlights to local requirements.

## Taillight Assembly



## Replacement

1. Open the hatch and the maintenance cover of the taillight.
2. Disconnect the 6-P connector from behind the taillight.
3. Remove the 6 mount nuts and the taillight assembly.

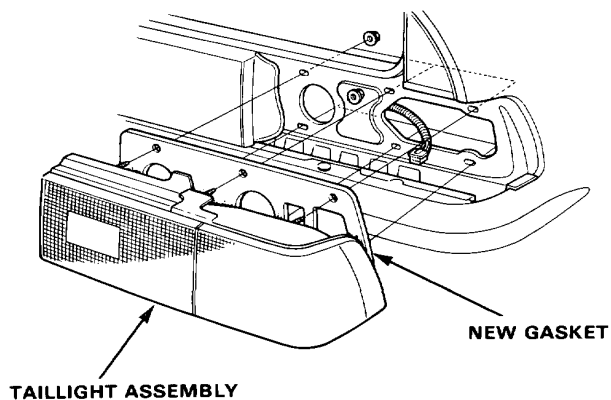

4. Inspect the gasket; replace if it is distorted or overly compressed.