


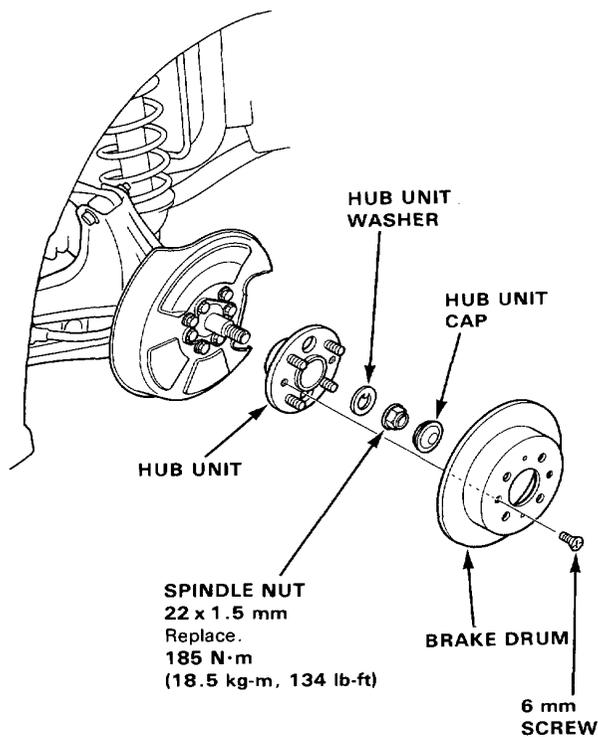


Hub Unit Bearing Replacement

1. Jack up the rear of car and support on safety stands in proper location.
2. Remove the rear wheel, two 6 mm screws and brake disc.
NOTE: If the brake disc is difficult to remove, install 8 mm bolts into the threaded and tighten them.
3. Remove the hub unit cap unstack the spindle nut, then loosen the spindle nut.
4. Remove the hub unit and hub unit bearing.



Damper Removal

1. Jack up the rear of car and support on safety stands in proper locations.
2. Remove the damper upper cover at the rear seat lining.
3. Remove the damper upper mounting base nuts.

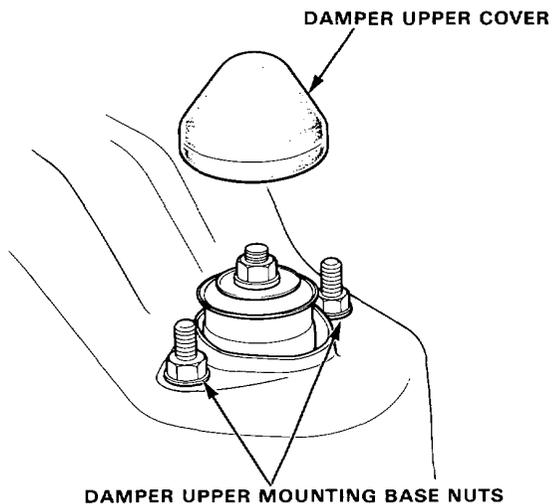

4. Remove the damper mounting bolt.
5. Lower the lower arms and remove the damper assembly.

