


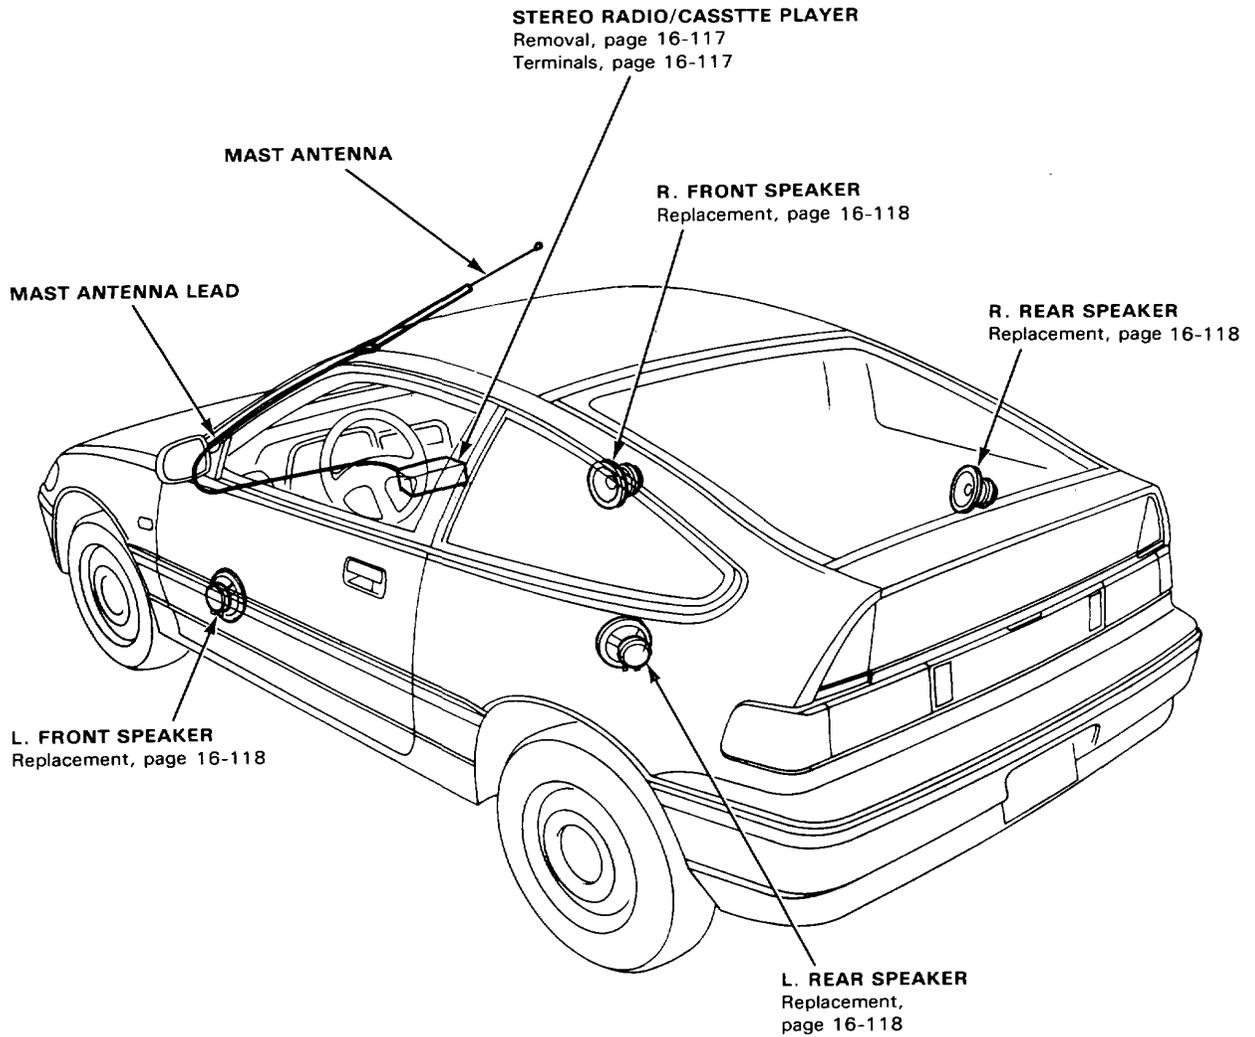


Stereo Sound System

Component Location Index



Stereo Sound System


Circuit Diagram

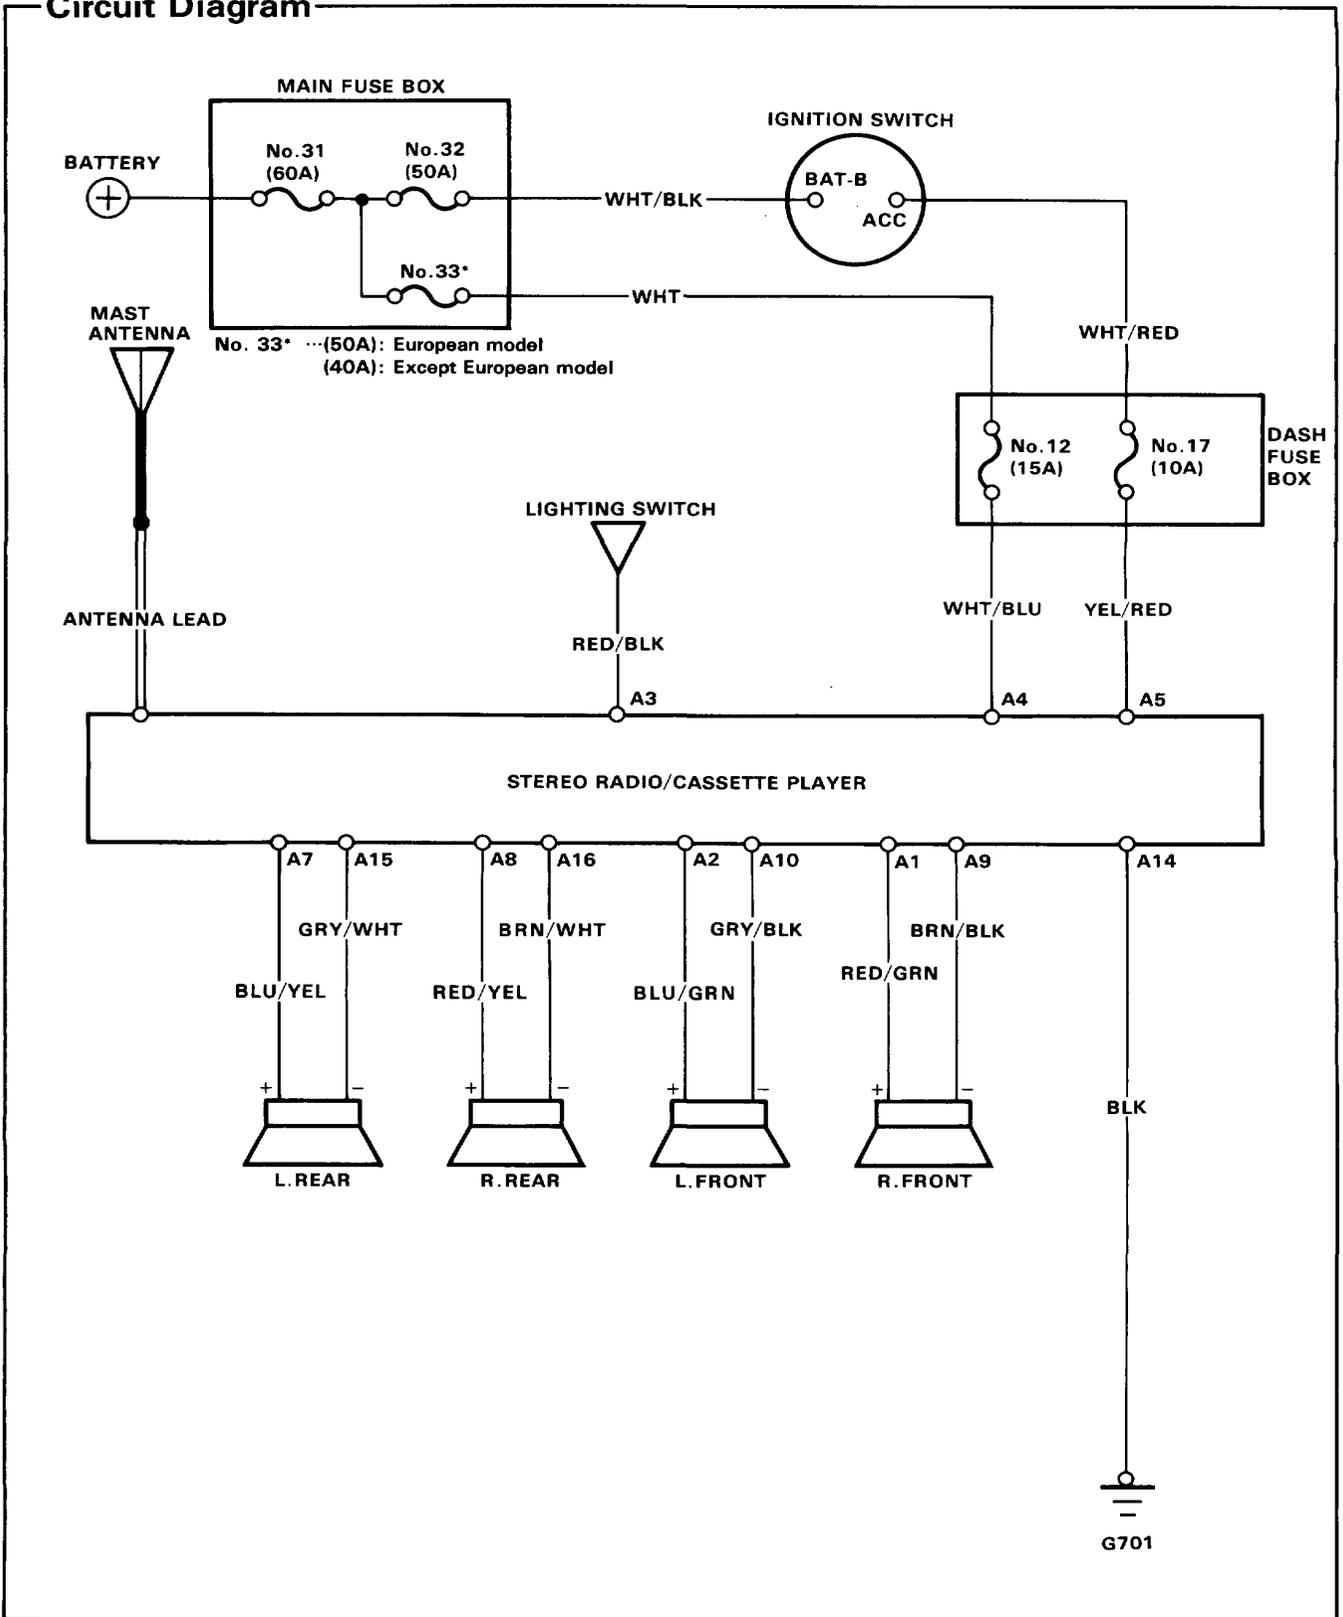




Unit Removal

A-Type:

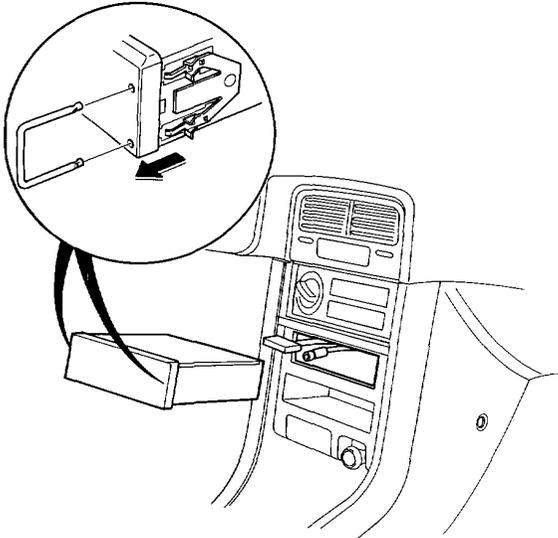


B-Type:

1. Remove the front console.
2. Remove the 2 screws and pull the stereo radio/cassette player out of the center instrument panel, then disconnect the 16-P connector and mast antenna lead from the stereo radio/cassette player.

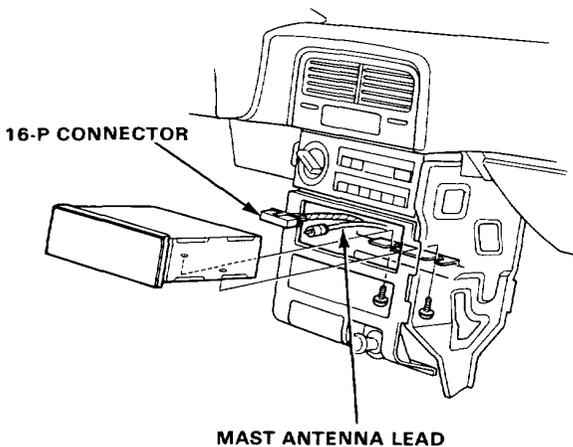

Unit Terminals

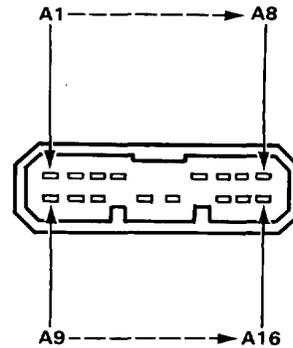


Terminal	Wire	Destination
A1	RED/GRN	Right front speaker ⊕
A2	BLU/GRN	Left front speaker ⊕
A3	RED/BLK	Light-on signal
A4	WHT/BLU	Constant power (Tuning memory)
A5	YEL/RED	ACC (Main stereo power supply)
A6		(Not used)
A7	BLU/YEL	Left rear speaker ⊕
A8	RED/YEL	Right rear speaker ⊕
A9	BRN/BLK	Right front speaker ⊖
A10	GRY/BLK	Left front speaker ⊖
A11		(Not used)
A12		(Not used)
A13		(Not used)
A14	BLK	Ground
A15	GRY/WHT	Left rear speaker ⊖
A16	BRN/WHT	Right rear speaker ⊖

Stereo Sound System

Speaker Replacement

Front Speakers:

1. Remove the 2 screws on the front edge of the grille.
2. Remove the screws, then disconnect the wires from the speaker.

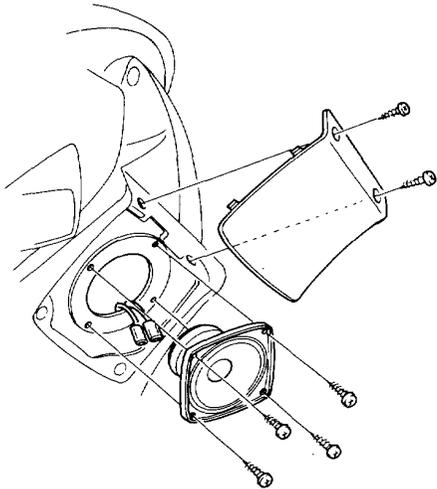

Rear Speakers:

1. Remove the 2 screws on the edge of the grille.
2. Remove the screws, then disconnect the wires from the speaker.

