


Evaporator


Replacement

1. Disconnect the battery negative terminal.
2. Discharge the refrigerant (page 15-42).
3. Disconnect the receiver line and suction hose from the evaporator.


CAUTION: Cap the open fittings immediately to keep moisture out of the system.

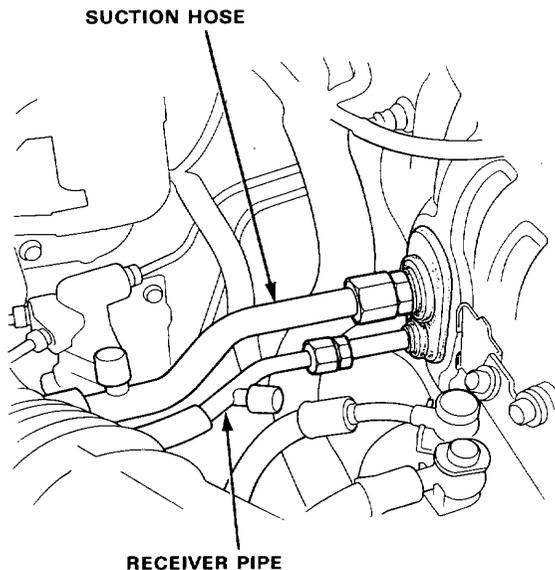


4. Remove the glove box (section 14).
5. Disconnect the connector from the thermostat switch and pull off the wire harness from the clamps.

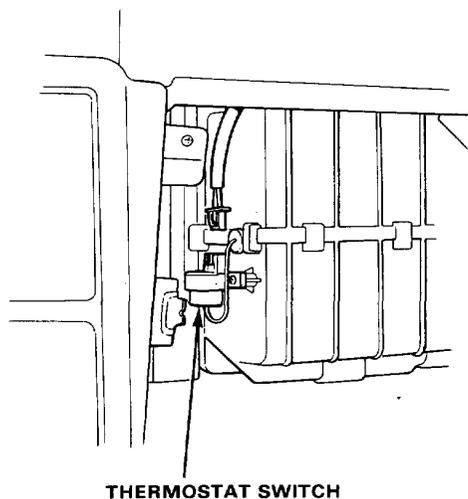

6. Remove the tapping screws (2) and A/C bands.

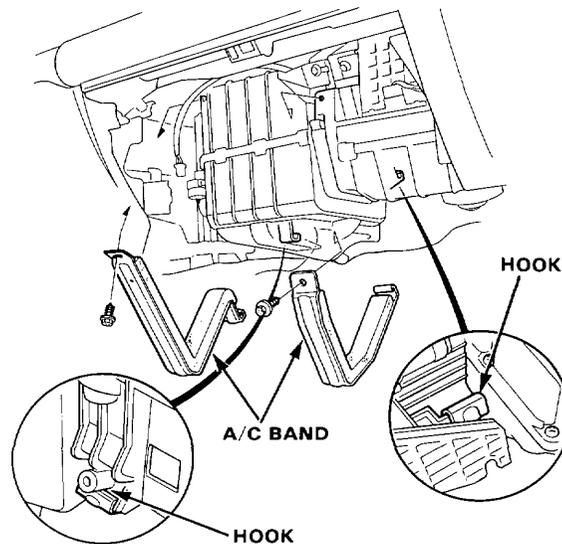

7. Remove the mounting bolts (2) and evaporator.

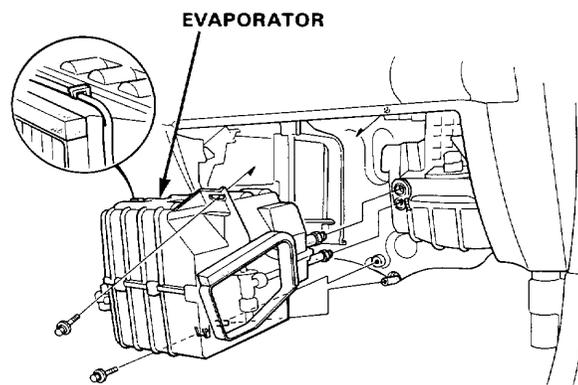

8. Install in the reverse order of removal, and:

- Apply a sealant to the grommets.
- Make sure that there is no air leakage.
- Charge the system (page 15-56) and test performance (page 15-59).