



# Fuses

## Dash Fuse Box (LHD)

NOTE: Dash fuse box is located left side, under dash.

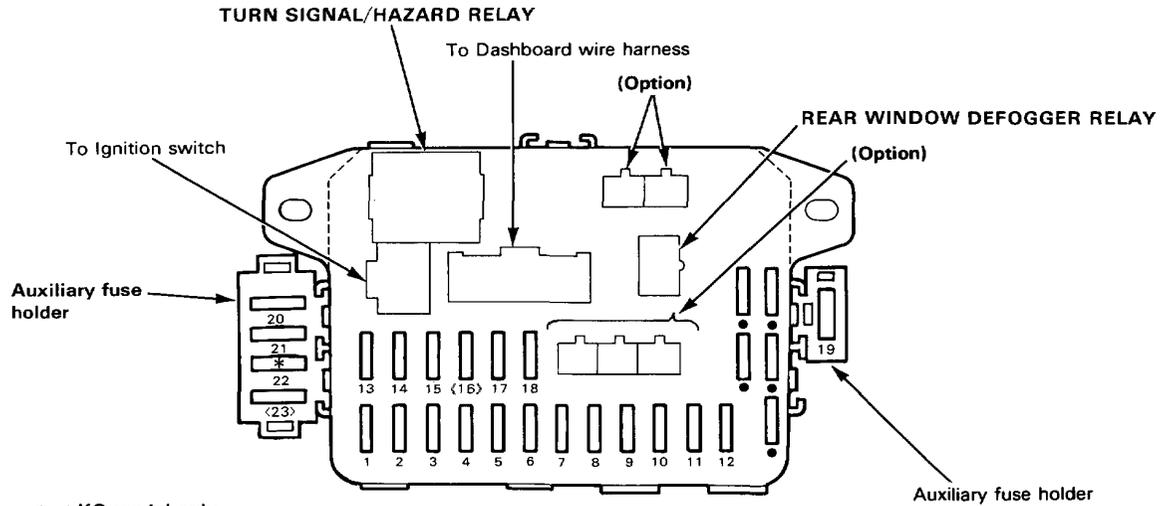


- \* : KS model only
- < > : KS, KW (Norway, Finland) models
- < > : Not used
- : Spare fuse

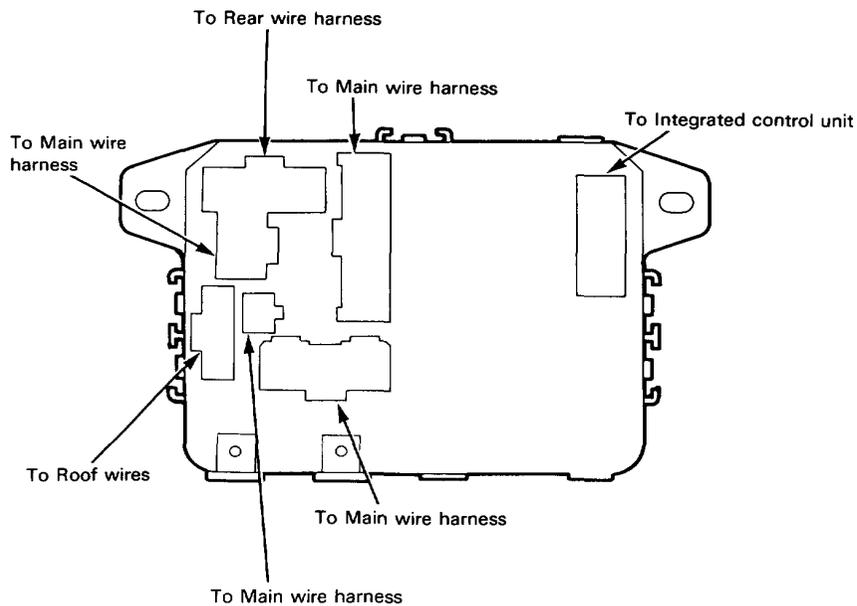



(RHD)

NOTE: Dash fuse box is located right side, under dash.

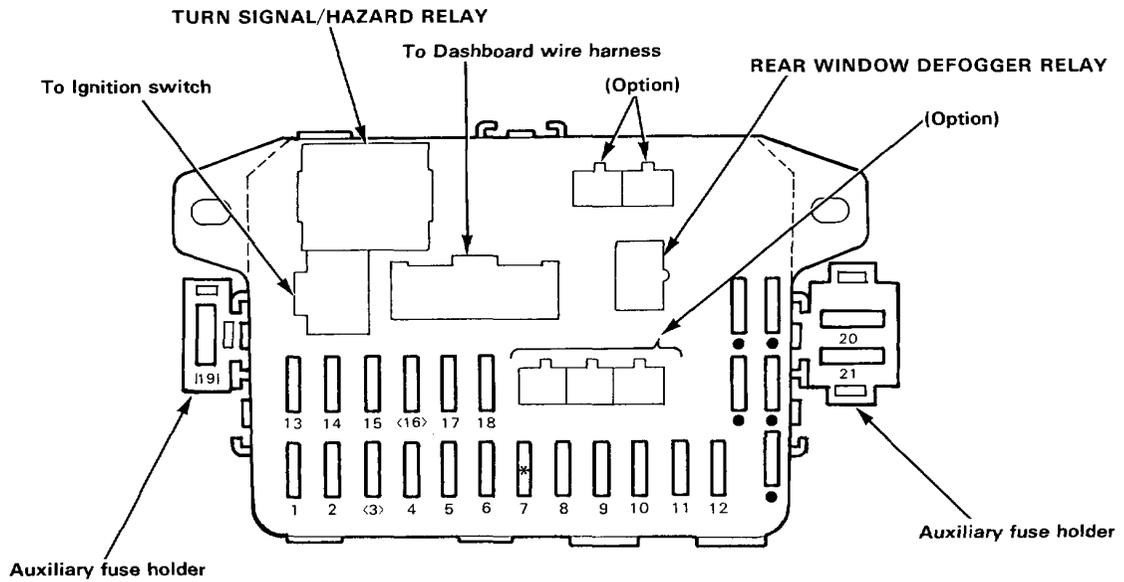

- \* : KE model only
- < > : Not used
- : Spare fuse

