

# Test

## Function Control Switch


1. Disconnect the 13P connector from the heater control.
2. Check for continuity between the terminals according to the table.

Terminal No. Position	4	10	9	3	8	12 or 13

1	2	3		4	5	6
7	8	9	10	11	12	13

## Function Control Motor

1. Connect the battery positive terminal to the 5 terminal of the function control motor and negative to the 1 terminal.
2. Using jumper wire short the 1 terminal individually to the 2, 3, 4, 7 and 8 terminals to follow the order.
  - The motor should run each time the short circuit is made.

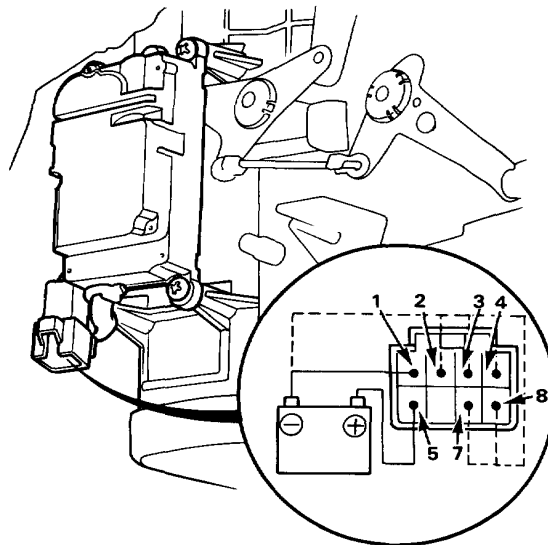

View from  
terminal side