


Seat Belts

Rear Replacement

CAUTION: Check the seat belts for damage and replace them if necessary. Be careful not to damage them during removal and installation.

1. Remove the rear seat (page 14-48).
2. Remove the quarter trim panel (page 14-44).
3. Remove the the anchor bolts with a 17 mm socket or box-end wrench.

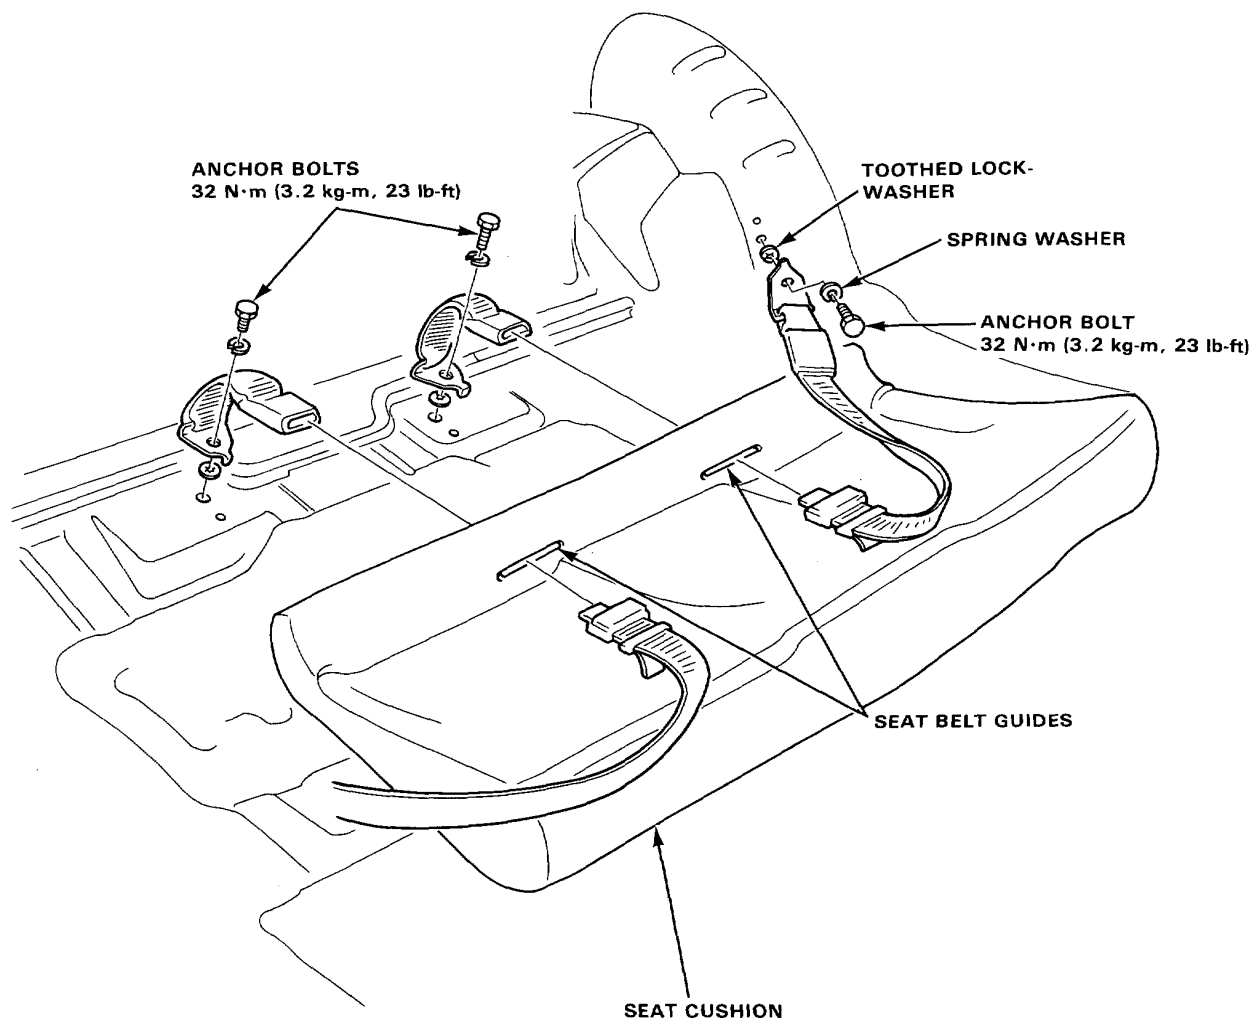

4. Install the seat belt in the reverse order of removal.

NOTE:

- Before attaching the quarter trim panel, make sure there are no twists in the belts.
- Pass the seat belts through the seat belt guides of the seat cushion and side box lid (page 14-44).